進


RICOH

プロジェクター

取扱説明書 (日本国内用)

形名

IPSiO PJ X3131 IPSiO PJ WX3131 IPSiO PJ X3241

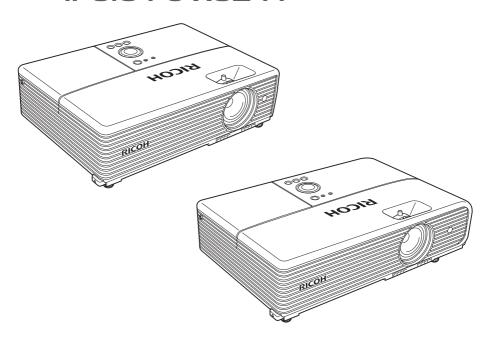

- このたびはリコープロジェクターをお買い上げいただきまして、まことにありが とうございます。
- お求めのリコープロジェクターを正しく使っていただくために、お使いになる前にこの「取扱説明書」をよくお読みください。
- ●お読みになったあとはいつも手元においてご使用ください。
- ●安全に正しくお使いいただくために、操作の前には必ず本書の「安全上のご注意」をお読みください。
- ●保証書を必ずお受け取りください。
- ●製造番号は品質管理上重要なものです。お買い上げの際は、本機背面に表示された製造番号と保証書に表示された製造番号が一致しているかご確認ください。

安全上のご注意

- ●ここに示した注意事項は、安全に関する重大な内容を記載していますので必ず 守ってください。
- ●表示と意味は以下のようになっています。

[表示の説明]

表示	表示の意味		
♠ 警告	"取扱いを誤った場合、使用者が死亡または重傷 ^{* 1} を負うことが想定されること"を示します。		
	が想定されること゛を示します。		
│∧決辛	"取扱いを誤った場合、使用者が傷害 ^{*2} を負うことが想定されるか、または物的損害 ^{*3} の発生が想定されること"を示します。		
<u>/ ! </u>	るか、または物的損害*3の発生が想定されること"を示します。		

※ 1: 重傷とは、失明やけが、やけど(高温・低温)、感電、骨折、中毒などで、後遺症 が残るものおよび治療に入院・長期の通院を要するものをさします。

※ 2:傷害とは、治療に入院や長期の通院を要さない、けが・やけど・感電などをさします。 ※ 3:物的損害とは、家屋・家財および家畜・ペット等にかかわる拡大損害をさします。

[図記号の例]

図記号	図記号の意味
禁止	○ は、禁止(してはいけないこと)を示します。 具体的な禁止内容は、図記号の中や近くに絵や文章で示します。
指示	● は、 指示 する行為の強制(必ずすること)を示します。 具体的な強制内容は、図記号の中や近くに絵や文章で示します。
注意	△ は、 注意 を示します。 具体的な注意内容は、図記号の中や近くに絵や文章で示します。

҈О警告

◆異常や故障のとき

■ 煙が出ている、変なにおいがするときは、す ぐに電源プラグをコンセントから抜くこと 煙が出なくなるのを確認し、お買い上げの販売 店にご連絡ください。そのまま使用すると、火災・プラグを抜け 感電の原因となります。



҈Λ警告

◆異常や故障のとき(つづき)

■ 内部に水や異物がはいったら、すぐに電源 プラグをコンセントから抜くこと

そのまま使用すると、火災・感電の原因となり ます。お買い上げの販売店に点検をご依頼くだ プラグを抜け さい。



■ 落としたり、キャビネットを破損したときは、 すぐに電源プラグをコンセントから抜くこと そのまま使用すると、火災・感電の原因となり ます。お買い上げの販売店に点検をご依頼くだ プラグを抜け さい。





■ 電源コードが傷んだり、電源プラグが発熱し たときは、すぐに電源を切り、電源プラグが 冷えたのを確認してコンセントから抜くこと そのまま使用すると、火災・感電の原因となり ます。電源コードが傷んだら、お買い上げの販 ^{プラグを抜け} 売店に交換をご依頼ください。






◆設置されるとき

■ 屋外や風呂、シャワー室など、水のかかる おそれのある場所には置かないこと 火災・感電の原因となります。







■ 電源プラグは交流 100V のコンセントに 接続すること

交流 100V 以外を使用すると、火災・感電の原 因となります。





■ ぐらつく台の上や傾いた所など、不安定な 場所や振動のある場所に置かないこと 本機が落ちて、けがの原因となります。





■ 上にものを置かないこと

- 金属類や、花びん・コップなどにはいった 液体や化粧液などが内部にはいった場合、 火災・感電の原因となります。
- ●重いものなどが置かれて落下した場合、け がの原因となります。





҈∰告

◆設置されるとき (つづき)

■ 小さなお子様の手の届くところには、設置・ 保管しないこと

落ちたり、倒れたりして、けがの原因となるこ とがあります。



◆ご使用になるとき

■ 修理・改造・分解はしないこと

火災・感電の原因となります。

点検・調整・修理はお買い上げの販売店にご依 頼ください。

分解した場合、保証やその他のサービスは受け られません。





■ 通風孔などから異物を入れないこと

金属類や紙などの燃えやすいものが内部には いった場合、火災・感電の原因となります。特に お子様のいる環境ではご注意ください。





■ 水にぬらさないこと

火災・感電の原因となります。雨天、降雪中、海岸、 水辺では特にご注意ください。





■ 電源コードは

- 傷つけたり、延長するなど加工したり、加 熱したりしないこと
- ●引っ張ったり、重いものを載せたり、はさ んだりしないこと
- 無理に曲げたり、ねじったり、束ねたりし ないこと
- 付属品以外の電源コードセットを使用しな いこと

火災・感電の原因となります。

● 付属の電源コードセットは、他の機器に使 用しないこと

火災・感電の原因となります。





⚠警告

◆ご使用になるとき (つづき)

■ 雷が鳴りだしたら、本機、接続ケーブル、 電源プラグなどに触れないこと 感電の原因となります。





■ 点灯中はレンズや通風孔をのぞかないこと 点灯している状態でレンズや通風孔をのぞき込まないでください。強い光が出ていますので視力障害などの原因となります。特にお子様のいる環境ではご注意ください。





■ 電源プラグは必ず根元まで確実に差し込む こと

差し込みが不完全ですと、感電や発熱の原因になります。 傷みやゆるみのあるコンセントは使用しないでください。





◆お手入れについて

■ 時々電源プラグを抜き、刃や刃の取付面にゴミやほこりが付着している場合はきれいに掃除すること

電源プラグの絶縁低下によって、火災の原因となります。





⚠警告

◆お手入れについて (つづき)

■ ランプ交換は必ず

専用の IPSiO PJ 交換用ランプ タイプ 1 (別売)を使用すること

専用以外を使用すると故障や破損してけがの原 因となります。また、古いランプは使用しない でください。



指示

■ 天吊り使用時のランプ交換や清掃は販売店 に依頼すること

- 高所での作業をお客様ご自身で行うと、転落などによってけがの原因となります。
- 天吊り使用時はお客様で自身でランプカバーを開けないでください。ランプカバーが落下したり、また万一、ランプが破裂しているとガラス破片が落下してけがの原因になります。





注意

◆設置されるとき

■ 温度の高い場所に置かないこと

直射日光の当たる場所・閉めきった自動車内・ストーブのそばなどに置くと、火災・感電の原因となることがあります。



■ 湿気・油煙・ほこりの多い場所に置かないこと 加湿器・調理台のそばや、ほこりの多い場所な どに置くと、内部にほこりなどが蓄積して、火災・ 感電の原因となることがあります。





■ 設置の際は通風孔をふさがないこと

内部温度が上昇し、火災の原因となることがあ ります。

- ●壁に押しつけないでください。
- ●押し入れや本箱など風通しの悪い所に押し込まないでください。
- テーブルクロス・カーテンなどを掛けたり しないでください。
- じゅうたんや布団の上に置かないでください。





介注意

◆設置されるとき (つづき)

■ 移動させる場合は、電源プラグ・外部との 接続線をはずすこと

電源プラグを抜かずに運ぶと、電源コードが傷 つき火災・感電の原因となることや、接続線な どをはずさずに運ぶと、本機が転倒し、けがの 原因となることがあります。





■ 本機を他の機器に積み重ねたり、本機の上 に他の機器を載せないこと

上面、底面が熱くなりますので、他の機器へ損 害を与えることがあります。





■ 電源プラグのアース端子は、必ずアースに 接続すること

接続しないと、感電の原因となることがありま す。





■ 通気の悪い状態で使用しないこと

本機を箱などに入れた状態で使用しないで ください。内部温度が上昇し、火災の原因 となることがあります。





◆ご使用になるとき

■ 電源プラグを抜く場合は、電源コードを 引っ張って抜かないこと

電源コードを引っ張って抜くと、電源コードや 電源プラグが傷つき、火災・感電の原因となり 引っ張り禁止 ます。電源プラグを持って抜いてください。





■ ぬれた手で電源プラグを抜き差ししないこ

感電の原因となることがあります。





■ 旅行などで長期間で使用にならないとき は、安全のため電源プラグをコンセントか ら抜くこと

万一故障したとき、火災の原因となることがあ ります。



҈∖注意

◆ご使用になるとき (つづき)

■ 排気孔、ランプカバー、底面は特に熱くな るので触れないこと

やけどや他の機器への損害を与える原因となり ますので、触ったり、排気孔の近くに他の機器 を設置したりしないでください。



また、排気孔の近くに置かれた金属製のものは 特に熱くなりますので注意してください。

■ 本機の上や排気孔の近くに、感熱紙の資料や 変形しやすいものを長時間放置しないこと 熱で感熱紙などの情報が消えたり、色が変わっ たり、変形することがあります。



■ 本機を立てて使用しないこと

本機を立てて使用すると、倒れてけがの原因と なります。





■ リモコンに使用している乾電池は、

- 指定以外の電池は使用しないこと
- ●極性表示 [(+)と(-)] を指示と逆に挿入しないこと
- 充電・加熱・分解・ショートしたり、火の中に入れないこと
- 乾電池に表示されている [使用推奨期間] を過ぎたり、使い切った乾電池はリモ コンに入れておかないこと
- 種類の違う乾雷池、新しい乾雷池と使用した乾雷池を混ぜて使用しないこと これらを守らないと、液もれ・破裂などによって、やけど・けがの原因となることが あります。もし、液に触れたときは、水でよく洗い流し医師に相談してください。器 具に付着した場合は、液に直接触れないでティッシュペーパーなどでふき取ってくだ さい。(液をふき取ったティッシュペーパーなどは、水を含ませてから燃やせるごみ として廃棄してください)





■ 動作時にレンズの前に物を置かないこと

物が高温になり、やけどや火災の原因になる場 合があります。

映像を一時的に消す場合にはリモコンのミュー トをお使いください。



⚠注意

◆お手入れについて

■ ランプを交換するときは、電源を切り、必ず 1 時間以上たって、本機が冷えてから行うこと

光源ランプユニットは高温となっている部分が ありますので特にご注意ください。やけど・け がの原因となります。



使用済みのランプは、破損させないように取扱いに注意してください。

■ お手入れの際は、安全のため必ず電源プラグをコンセントから抜いて行うこと 感電の原因となることがあります。





■ 定期的に本機内部の清掃をお買い上げの販売店にご相談ください

内部にほこりがたまったまま使用すると、火災・ 故障の原因となることがあります。

特に、湿気の多くなる梅雨期の前に行うとより 効果的です。内部の清掃費用についても、お買 い上げの販売店にご相談ください。





注意

◆ランプについて

本機の光源には、点灯時に内部気圧が高くなる水銀ランプが使われています。このランプには以下の特性がありますので、内容をよく理解して、取扱いには十分注意してください。

- 衝撃や劣化などによって、ランプが破裂して大きな音がしたり、寿命が尽きて点灯 しなくなることがあります。
- 破裂や寿命に至るまでの時間には、ランプによって大きな差があり、使い始めてま もなく破裂することもあります。
- 交換時期を過ぎて使用すると、破裂しやすくなります。
- ランプが破裂すると、ガラスの破片が本機の内部に飛び散ったり、通気孔などから 外に出たりすることがあります。
- ランプが破裂すると、ランプの内部に封入された微量の水銀ガスがガラスの粉塵とともに本機の排気孔などから放出されることがあります。
- 画面にランプ交換の表示が出たら、すみやかに新しいランプに交換してくだ さい
 - 交換時期になると「ランプが寿命です。交換してください。」というメッセージが 画面に表示されます。
 - そのまま使い続けると、ランプが破裂する可能性が高くなります。
 - 時々ランプの使用時間を確認して、交換時期が近づいたら新しいランプをご用意ください。(p.43)ページの「状態表示」をご覧ください)

■ ランプが割れたときには・・・

- 万一、ランプやレンズなどのガラス部品が割れた際には、ガラス破片でけがなどをしないように取扱いに注意し、お買い上げの販売店に修理を依頼してください。
- 万一、ランプが破裂した際には、本機の電源コードを抜き、退室して室内を十分に換気してください。その後、本機の周囲を念入りに清掃して、その場に置かれていた食品は捨ててください。



● ランプが破裂した際に、ガラスの粉塵や水銀ガスが目にはいったり、吸い込んだりしたと思われるときは、すみやかに医師に相談してください。

使用上のお願い

◆取り扱いに関すること

- ■振動や衝撃が加わるような輸送の際は、お買い上げの際に本機がはいっていた梱包箱とキャリングバッグをで使用ください。付属のキャリングバッグなどのままの状態でトラックなどで輸送すると、振動や衝撃によって本機が故障することがあります。また、傷んだ梱包箱で輸送すると同様に故障の原因となります。新しい梱包箱の入手についてお買い上げの販売店にご相談ください。
- 殺虫剤や揮発性のものをかけたりしないでください。また、ゴムやビニール製品などを 長時間接触させないでください。変色したり、塗装がはげるなどの原因となります。
- ■本機は、24 時間動作などの長期連続運転で使用されることは意図していません。このような条件や、箱などに入れた状態で使用して故障した場合は、保証期間であっても有料修理とさせていただきます。
- ■電源オフ直後の本体は高温(特に排気孔、ランプカバー、底面など)になっていますので取り扱いにご注意ください。

◆置き場所や置きかたに関すること

- 暖房機具の近くなど、温度の高い場所に置いて使用しないでください。故障や寿命を縮める原因となります。
- 油煙やたばこの煙にさらされる場所は避けてください。光学部品に汚れが付着して、寿命を縮めたり、画面が暗くなったりする原因となります。
- 本機をテレビやラジオの近くで使用すると、画像や音声に悪い影響を与えることがあります。このような場合にはテレビやラジオから離してください。
- 低温の場所から高温の場所に移動したときなどには、結露によって本機のレンズや内部 の部品などに水滴が付くことがあります。そのまま使用すると、故障の原因となること がありますので、結露(水滴)が自然に消えるまでお待ちください。
- 高地では空気が希薄なため、本機の冷却効率が低下しますので「ファンモード」の設定を「高」にしてで使用ください。 p.42
- 本機を立てたり、極端に傾けた状態 (± 20 度以上) で使用しないでください。故障や 寿命を縮める原因となります。
- 延長コードやテーブルタップを使う場合は、つなぐ機器の消費電力の合計が延長コードやテーブルタップの定格電力を超えない範囲でお使いください。超えて使用すると発熱し、火災の原因となります。
- 電源ケーブルや接続ケーブルは足を引っ掛けて転倒したりしないように配線してください。 セットが落下してけがの原因となることがあります。

使用上のお願い(つづき)

◆お手入れに関すること

- ベンジン、シンナーは絶対使用しないでください。変形、変色、塗装がはげるなどの原 因となります。
- 化学ぞうきんは使用しないでください。
- エアフィルターはこまめに清掃してください。目詰まりすると、本機内部の温度が上がり、液晶パネルなどの光学部品の寿命を縮める原因となります。

◆著作権について

本機を用いて、市販映像ソフトや放送・有線放送番組を、個人の視聴以外の目的で上映・伝達する行為、フリーズ、リサイズ機能等によって改変する行為、画面サイズ切り換え機能によって、映像の縦横比を変えて表示するなどの行為は、いずれも権利者に無断で行うと当該映像ソフトや放送番組等の著作権や著作隣接権を侵害するおそれがあるため、事前に権利者から使用許諾を受ける等適正な権利処理をしてください。

その他のご注意とお知らせ

◆電波障害について

本機は、情報技術装置からの妨害波の許容値を定めた規格 J55022 (H14) のクラス B 情報技術装置です。本機がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書にしたがって正しい取り扱いをしてください。

◆廃棄について

本機には、人体や環境に有害とされる以下の物質が含まれています。

無機水銀(ランプ)

本機または使用済みランプ、使用済み乾電池を廃棄するときは、地方自治体の条例または規則にしたがって処理してください。詳しくは地方自治体にお問い合わせください。

◆免責事項について

- 地震や雷などの自然災害、火災、第三者の行為、その他の事故、お客様の故意または過失、誤用、その他異常な条件下での使用によって生じた損害に関して、当社は一切の責任を負いません。
- 本機の使用または使用不能から生ずる付随的な損害(事業利益の損失、事業の中断など) に関して、当社は一切の責任を負いません。
- 取扱説明書の記載内容を守らないことによって生じた損害に関して、当社は一切の責任 を負いません。
- 当社が関与しない接続機器、ソフトウェアとの組み合わせによる誤動作などから生じた 損害に関して、当社は一切の責任を負いません。

その他のご注意とお知らせ(つづき)

◆商標について

- VGA、SVGA、XGA、SXGA、UXGA、WXGA は、International Business Machines Corporation の商標または登録商標です。
- Microsoft、Windows、Windows 2000、Windows XP、Windows Vista、Windows 7、PowerPoint は、米国 Microsoft Corporation の米国およびその他の国における登録商標または商標です。
- Mac は、Apple Computer Inc. の登録商標です。
- Adobe, Acrobat Reader は、Adobe Systems Incorporated (アドビシステムズ社) の商標または登録商標です。
- 説明書に記載のメーカー名および商品名は、各社の登録商標です。

◆日本国内用です

本機を使用できるのは日本国内のみです。外国では電源電圧が異なりますので使えません。 This Projector is designed for use in Japan only and cannot be used in any other country.


◆この取扱説明書の表記について

- 関連する説明の参照先ページ番号を以下のように表記します。 26 ページを参照していただく場合の例: p.26
- 本書中のイラストはイメージイラストです。実際の製品とは形状などが異なる場合があります。
- 本書中のイラストは PJ X3131/WX3131 のイラストです。PJ X3241 とは形状の異なる部分があります。

安全に関する本機の表示について

◆警告、注意のラベル位置

本機には、下記に示す位置に安全にお使いいただくための、<u>(木)</u>警告、<u>(木)</u>注意のラベルまたは刻印があります。表示にしたがって安全にお使いください。

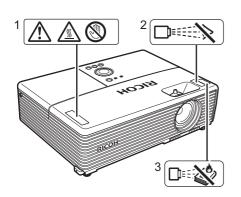

吸気孔、排気孔をふさがないこと。内部の発 熱によって火災などの原因となります。

排気孔、ランプカバーの近くに手や顔を近づけたり、ものや他の機器を置かないこと。やけどや変形、変色、機器の故障の原因となります。

動作中はレンズをのぞかないこと。視力障害 などの原因となります。

3 動作時にレンズの前に物を置かないこと。物が高温になり、やけどや火災の原因になる場合があります。映像を一時的に消す場合にはリモコンのミュートをお使いください。

もくじ


で使用の前に	
安全上のご注意	2
使用上のお願い	11
その他のご注意とお知らせ	12
安全に関する本機の表示について	13
もくじ	14
準備	
同梱品の確認	16
本体各部のなまえ	17
本体操作部、リモコン各部のなまえ	
背面端子のなまえ	20
リモコンの準備と使いかた	21
設置する	22
接続する	25
使いかた	
電源の入れかたと切りかた	26
基本操作	
便利な機能を使う	31
自動設定をする (オートセット) コンピューターの信号のみ	31
台形歪みを補正する (キーストン)	31
映像を拡大する(リサイズ)	
映像と音声を一時的に消す(ミュート)	
画質を変える	
画面サイズを変える	
映像を静止させる (フリーズ)	
パスワード設定をする	
メニューを使う	
設定表示の設定	
映像調整メニュー	
表示設定メニュー	
初期設定メニュー	
状態表示	43
メンテナンス	
エアフィルターの清掃	
レンズ、本体の清掃	
ランプの交換	45

その他

インジケーターによる異常表示	48
故障かな・・・と思ったときは	
仕 様	
	55
FAQ	56
消耗品について	
関連商品について	56
お客様登録の方法	57
はがきで登録する	57
インターネットで登録する	

同梱品の確認

本体以外に箱の中に以下のものがはいっているか、ご確認ください。万一不足しているものがあるときには、すぐにお買い上げの販売店にご連絡ください。

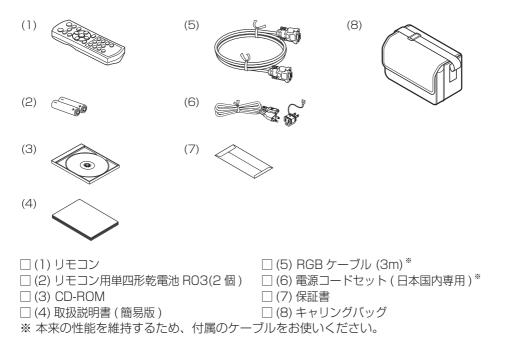

◆付属の CD-ROM について

付属の CD-ROM には、簡易版取扱説明書で省略された内容を含む取扱説明書が PDF 形式で収録されています。

(PDF: Portable Document Format)

この取扱説明書をご覧になるためには Acrobat Reader 5 以上を使ってご覧ください。

■ Adobe® Acrobat® Reader®、または Adobe® Reader® について
本 CD-ROM には Acrobat® Reader® は収録していません。
ご使用のパソコンで PDF が開けられない場合は、アドビシステムズ社のホームページから Acrobat Reader をダウンロードしてパソコンにインストールしてください。


■取扱説明書をご覧になるとき

CD-ROM を CD-ROM ドライブにセットします。インストール画面でご覧になる説明書をクリックします。

インストール画面が表示されないときは、 ${
m CD-ROM}$ の中の ${
m PDF}$ をダブルクリックします。

Acrobat[®] Reader[®] が起動し、取扱説明書の表紙の画面と「しおり」が表示されます。「しおり」のタイトルをクリックすると、その説明のページにジャンプすることができます。また、本文中の をクリックすると、参照先のページにジャンプすることができます。Acrobat[®] Reader[®] の詳細は「ヘルプ」メニューをご覧ください。

本体各部のなまえ

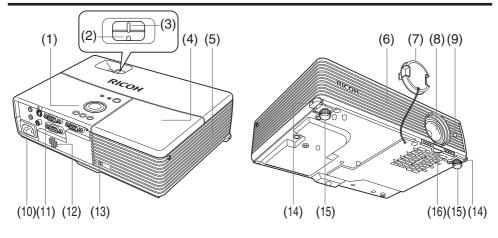

なまえ : おもな機能

(1) 本体操作部 : 本機を操作します。 p.18

(2) ズームレバー : 画面のサイズを調整します。 p.29(3) フォーカスレバー : 画面のピントを調整します。 p.29

(4) **ランプカバー** : ランプを交換するときに取りはずします。 p.46

(5) 排気孔(6) 吸気孔(7) 内部で高温になった空気を排出します。(8) い気孔(9) います。(9) います。(9) います。(1) います。(2) います。(3) います。(4) います。(5) います。(6) います。

(7) レンズキャップ : 本機を使用しないときは、レンズ保護のためキャップを

取り付けた状態にします。

(8) レンズ : 映像(光)を拡大投写します。

(9) リモコン受光部 : リモコン操作を受け付けます。 p.21(10) AC IN ソケット : 付属の電源コードセットを接続します。

(11) **背面端子部** : 外部機器を接続します。**p.20**

(12) スピーカー: 音声を鳴らします。

(13) 盗難防止ロック穴 : 盗難防止用のチェーンなどを取り付けます。

(14) フットアジャスター解除ボタン: フットアジャスターを出すときや収納するとき押します。

p.29


(15) **フットアジャスター** : 上向きの投写角度を調整します。p.29


(16) エアフィルター : 内部へのほこりやごみの侵入を防ぎます。 0.44

本体操作部、リモコン各部のなまえ

本体操作部

リモコン

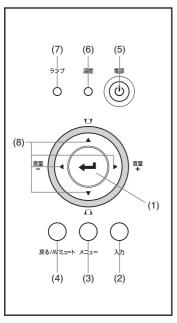

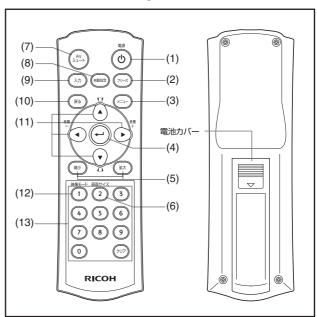

なまえ : おもな機能

本体操作部

(1) 決定ボタン : 選択したモードを決定します。

(2) **入力ボタン** : 入力切換をします。 p.28

(3) **メニューボタン** : メニューの表示をします。**p.36**

(4) **戻る /AV ミュートボタン**: 一つ前の表示に戻します。また、映像と音声を一時的に

消します。**p.32**

(5) **電源ボタン /** : 電源を入り / 切り (スタンバイ) します。 p.26

電源インジケーター : 電源の入り/切り(スタンバイ)の状態を表示します。

p.26

(6) 温度インジケーター : 内部温度の異常を知らせます。 p.48(7) ランプインジケーター : ランプのモードを表示します。 p.48

(8) 選択ボタン : メニューでの選択・調整や音量、台形歪みを調整します。

なまえ : おもな機能

リモコン

(1) **電源ボタン** : 電源の入り/切り(スタンバイ)をします。p.26

(2) **フリーズボタン** : 映像を静止します。 p.34

(3) メニューボタン : メニューの表示をします。 36(4) 決定ボタン : 選択したモードを決定します。

(5) **拡大ボタン、縮小ボタン**: 映像の拡大表示の倍率を変更します。**p.32**

(6) **画面サイズボタン**: 画面サイズを切り換えます。 p.33(7) AVミュートボタン: 映像と音声を一時的に消します。 p.33

(8) **自動設定ボタン** : コンピューター入力時の設定をします。 p.31

(11) 選択ボタン : メニューでの選択・調整や音量、台形歪みを調整します。

(12) 映像モードボタン : 映像モードを切り換えます。 p.33(13) テンキーボタン : パスワードの設定時に使用します。


リモコン ボタン	入力項目	リモコン ボタン	入力項目
1	[1]	7	[7]
2	[2]	8	[8]
3	[3]	9	[9]
4	[4]	0	ΓΟ]
5	[5]	วบア	1文字消去します。
6	[6]		

■お知らせ

• 本書の以降の説明では、ボタンを以下のように表記します。

選択ボタン⇒ ◘ ◘ ◘ ◘、決定ボタン⇒ ◘

背面端子のなまえ

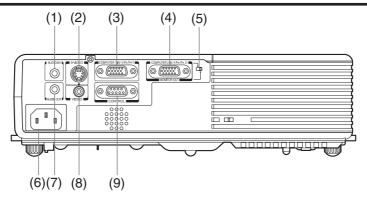

なまえ : おもな機能

(1) AUDIO IN 端子 : コンピューターやビデオ機器などからの音声信号を入力

します。(COMPUTER 1 IN/2 IN、VIDEO、S-VIDEO

兼用)。

: ビデオ機器などからの S 映像信号を入力します。 (2) S-VIDEO 端子

(3) COMPUTER 1 IN : コンピューターなどからの RGB 信号か、ビデオ機器な

どからのコンポーネント映像信号 (Y/P_B/P_B) を入力し (Y/P_B/P_B1) 端子

ます。

(4) COMPUTER 2 IN : コンピューターなどからの RGB 信号やビデオ機器などか $(Y/P_B/P_B2)/MONITOR$ らのコンポーネント映像信号 $(Y/P_B/P_B)$ を入力します。

OUT 端子

また(5)の切換スイッチにより MONITOR OUT 端子と してご利用いただけます。

(5) 切換スイッチ : COMPUTER 2 IN と MONITOR OUT を切り換えます。

(6) AC IN ソケット : 付属の電源コードセットを接続します。

: 音声信号を出力します。 (7) AUDIO OUT 端子

: ビデオ機器などからの映像信号を入力します。 (8) **VIDEO** 端子


(9) CONTROL 端子 : コンピューターを使って本機を操作するときに、制御用コ

ンピューターの RS-232C ポートと接続します。p.54

リモコンの準備と使いかた


■リモコンに乾電池を入れる

① 電池カバーをはずす




② 乾雷池を入れる

乾電池の+、-を確かめて入れてください。



単四形乾電池 RO3 を 2 個使用。


③ 電池カバーを閉める



■リモコン操作のしかた

本機のリモコン受光部に向けてリモコンのボタンを押す

• 本機の前方から操作する

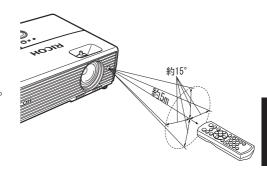

本機の後方からリモコン操作する場合、投 写面の反射を利用しての操作になりますの で、投写面の形状や材質によって到達距離 が短くなります。

■ 乾電池について

- 取扱いの際は「安全上のご注意」に記載された事項をお守りください。
- 長時間使用しないときは、乾電池を取り出してください。
- リモコンが動作しなかったり、到達距離が短くなったときは、すべて新しい電池と交換してください。(単四型乾電池 RO3 を 2 個ご使用ください)
- 乾電池は乳幼児や幼児の手の届くところに置かないでください。 飲み込んだりノドに詰まらせることがあります。万一飲み込んだ場合は、ただちに医 師にご相談ください。

■ リモコンについて


- リモコン受光部に太陽光や蛍光灯などの強い光があたると、リモコンが動作しないことがあります。
- 落としたり、衝撃をあたえないでください。
- 高温になる場所や湿度の高い場所に置かないでください。
- 水をかけたり、ぬれたものの上に置かないでください。
- 分解しないでください。
- 使用場所や周囲の状況によっては、まれにリモコン操作を受け付けにくいことがあります。このようなときは、リモコンを本機に向け直し、再度操作をしてください。

設置する

設置状態

本機は下図の4とおりの設置状態に対応しています。

工場出荷時は「床置き正面投写」に設定されています。設置方法に合わせて「**初期設定 2** メニュー | p.42 で [**設置状態**] の設定をしてください。

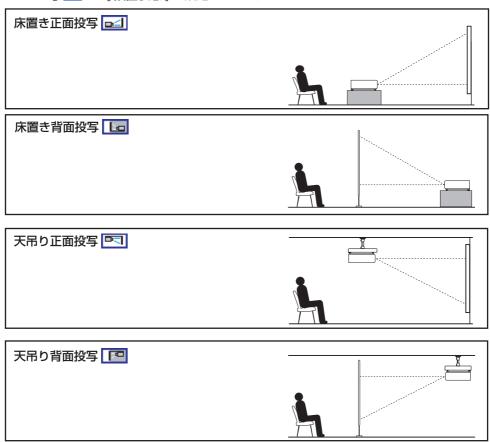

⚠警告


- 設置の際には「安全上のご注意」に記載された事項を守ること。
- 天吊り設置には専用の天井取付金具(別売り)と専門知識が必要です。設置工事に 不備があると、落下などによる事故の原因になりますので、必ず販売担当者に依頼 すること。
- 天吊り設置する場合は、異常時に電源を切るためのブレーカを設置すること。また、そのことは本機を使用するすべての人が知っているようにすること。

投写距離と画面サイズについて

下図と下表や計算式を参考にして画面サイズと投写距離を決めてください。(画面サイズは、フルサイズの映像を台形補正なしで投写したときのおよその値です)

PJ X3131

スクリーン

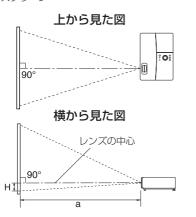

aはレンズからスクリーンまでの距離(m)で、0.89 m~10.93 m の範囲に対応します。

Hは、画面下端からレンズ中心までの高さです。


a (最短)= 投写画面サイズ(型) - 0.795 32.885

a (最長)= 投写画面サイズ(型)-0.673 27.397

	,		
画面サイズ	投写距離	高さ (H)	
型 (cm)	最短	最長	(cm)
至(GIII)	(ズーム最大)	(ズーム最小)	(CITI)
30 (76)	0.89	1.07	6.50
40 (102)	1.19	1.44	8.70
50 (127)	1.50	1.80	10.90
60 (152)	1.80	2.17	13.10
70 (178)	2.10	2.53	15.20
80 (203)	2.41	2.90	17.40
90 (229)	2.71	3.26	19.60
100 (254)	3.02	3.63	21.80
120 (305)	3.63	4.36	26.10
150 (381)	4.54	5.45	32.70
200 (508)	6.06	7.28	43.50
250 (635)	7.58	9.10	54.40
300 (762)	9.10	10.93	65.30

PJ WX3131

スクリーン

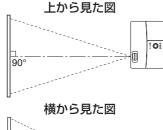




a はレンズからスクリーンまでの距離(m)で、0.94 m~11.58 m の範囲に対応します。 レンズの中心が、画面の下端になります。 a (最短)= 投写画面サイズ(型) - 0.758 31.022

a (最長)= <u>投写画面サイズ(型)-0.643</u> 25.845


画面サイズ	投写距離 a (m)		
	最短	最長	
型 (cm)	(ズーム最大)	(ズーム最小)	
30 (76)	0.94	1.14	
40 (102)	1.27	1.52	
50 (127)	1.59	1.91	
60 (152)	1.91	2.30	
70 (178)	2.23	2.68	
80 (203)	2.55	3.07	
90 (229)	2.88	3.46	
100 (254)	3.20	3.84	
120 (305)	3.84	4.62	
150 (381)	4.81	5.78	
200 (508)	6.42	7.71	
250 (635)	8.03	9.65	
300 (762)	9.65	11.58	

PJ X3241

スクリーン



横から見た図



a (最短)= 投写画面サイズ(型) - 0.890 32.863


a (最長)= <u>投写画面サイズ(型)-0.748</u> 27.363

画面サイズ	投写距離	高さ (H)	
	最短	最長	
型 (cm)	(ズーム最大)	(ズーム最小)	(cm)
30 (76)	0.89	1.07	6.50
40 (102)	1.19	1.44	8.70
50 (127)	1.49	1.80	10.90
60 (152)	1.80	2.17	13.10
70 (178)	2.10	2.53	15.20
80 (203)	2.41	2.90	17.40
90 (229)	2.71	3.26	19.60
100 (254)	3.02	3.63	21.80
120 (305)	3.62	4.36	26.10
150 (381)	4.54	5.46	32.70
200 (508)	6.06	7.28	43.50
250 (635)	7.58	9.11	54.40
300 (762)	9.10	10.94	65.30

 ${\sf a}$ はレンズからスクリーンまでの距離(m)で、 $0.89~{\sf m}\sim 10.94~{\sf m}$ の範囲に対応します。 ${\sf H}$ は、画面下端からレンズ中心までの高さです。

接続の前に

- 本機に接続する機器の取扱説明書もお読みください。
- コンピューターの機種によっては、本機に接続してご使用になれないものもあります。 RGB 出力端子の有無、対応信号 🛂 などを確認してください。
- 接続の際には、各機器の電源を「**切り**」にしてください。
- 図は接続例です。すべての機器を同時に接続できること、あるいは接続しなければならないことを意味するものではありません。(点線は差し換えることを意味します)

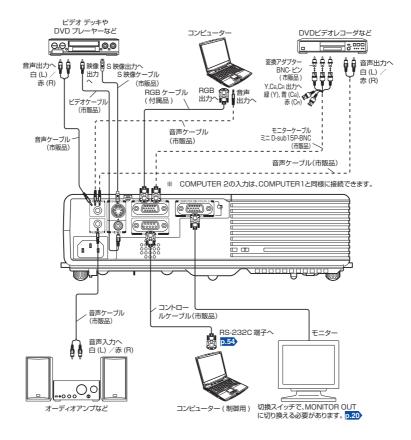


■ お知らせ

- COMPUTER 2 IN 端子を MONITOR OUT 端子として使用する場合には、COMPUTER 1 IN 端子に入力されている信号が出力されます。
- スタンバイ状態でも MONITOR OUT 端子から信号が出力されています。 ただし、AUDIO OUT 端子からは音声信号は出力されません。
- パソコンモニターで Y/PB/PR 信号は正常に受像できません。
- AUDIO IN 端子は COMPUTER 1 IN 端子と COMPUTER 2 IN 端子および VIDEO、 S-VIDEO に接続される機器で兼用です。
- AUDIO OUT 端子を接続すると本体のスピーカーから音声は出ません。
- AUDIO OUT 端子の出力は VOL ボタンで音量調整できます。

電源の入れかたと切りかた

■電源コードセットを接続する

- ↑ 本機の AC IN ソケットに電源コードセットのコネクターを差し込む
- ② 壁などのコンセントに電源プラグを差し込む 電源インジケーターが緑色に点滅し、スタンバイモー ドになります。

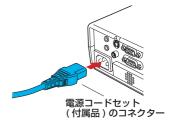


⚠警告

- 電源プラグは交流 100V のコンセントに接続すること。
- 緊急な場合にコンセントをすぐに抜けるよう、障害物などを置かない こと。

⚠注意

- 電源プラグのアース線は必ずアースに接続すること。
- アース線は必ず、電源プラグをコンセントに差し込む前に接続すること。また、アース線をはずす場合は、その前に必ず電源 プラグをコンセントから抜くこと。
- ぬれた手で電源プラグを抜き差ししないこと。



■電源の入れかた

の レンズキャップをはずす

電源を入れるときは、必ずレンズキャップをはずしてください。付けたままにしておくと、熱で変形することがあります。




2 電源ボタンを押す

ビープ音の設定が [**入り**] のときビープ音がなって電源がはいり、電源のインジケーターが橙色に点滅したあと、緑色に点滅します。しばらくするとスタート画面が映し出されます。



リモコン



↑ 警告 • 動作中はレンズをのぞかないこと。視力障害などの原因となります。

⚠注意

- 吸気孔、排気孔をふさがないこと。内部の発熱によって火災などの原因となります。
- 排気孔、ランプカバーの近くに手や顔を近づけたり、ものや他の機器を置かないこと。 やけどや変形、変色、機器の故障の原因となります。

■お知らせ

- スタート画面は、しばらくすると消えます。また、表示されないように [表示設定メニュー] p.38 で設定することもできます。
- ご購入後はじめてご使用になるときは、スタート画面が消えるとスタートメニューが表示されます。
- ビープ音は [初期設定 1 メニュー] p.41 で鳴らないように設定することもできます。
- キーロックが [入り] に設定されていると本体の操作ボタンは働きません。p.42
- パスワードが [**入り**] に設定されていると、パスワードを入力し、パスワード入力画面が消えるとスタート画面が表示されます。 p.35
- レンズに直接手を触れないこと。 投写レンズ面に指紋や汚れがつくと、映像不良の原因となることがあります。


■電源の切りかた

ありません。

ビープ音の設定が [**入り**] のとき音がなり、電源オフの確認メッセージが画面に表示されます。このメッセージは、しばらくすると消えます。(メッセージが消えた場合、この操作は無効になります。)

もう一度電源ボタンを押す

ビープ音の設定が[入り]のとき音がなり、画面は消えますが内部の冷却が続き、その後スタンバイ状態に戻ります。 冷却中は電源のインジケーターが点滅します。インジケーターが点滅中は再び電源を入れることができません。 この途中で電源プラグをコンセントから抜いても差し支え

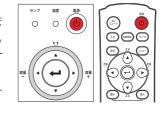


本体操作部

リモコン

❸ レンズキャップを取り付ける

ご使用後はレンズキャップを取り付けてください。



■お知らせ

• 本機はスタンバイ状態で 4.5W 程度の電力を消費します。長時間ご使用にならないときは、電源プラグを抜くことをおすすめします。

■お願い

• 電源を切って、すぐにまた電源を入れるときは、ランプが冷えるまで5分程度待ってください。ランプが高温になっていると、点灯しないことがあります。

基本操作

- **電源を入れる** 「**電源の入れかた** 」 **p.26** にしたがって電源を入れます。
- ❷ 言語、ランプパワーを選択する(はじめてお使いになるとき)

① □ □ □ □ ボタンで希望の言語を選び、 □ ボタンを押す







設定の結果を確認するメッセージが選択した言語で表示されます。

次に、ランプパワーの設定メニューが表示されます。

そのまま、何もしなければ「標準」に設定されます。変更したいときは、②の操作をしてください。

- ② ♥ ボタンでランプパワーを選び、 ボタンを押す
 - ボタンを押さなくても、設定を変えるとランプパワーは切り換わり、表示は数秒後自動的に消えます。

■お知らせ

- 次回以降は電源を入れたときにスタートメニューは表示されません。ただし、「初期設定2メニュー」 p.42 で [すべてを初期化] を実行した場合には、その次に電源を入れたときにスタートメニューが表示されます。
- 言語は「表示設定メニュー」 p.38、ランプパワーは「初期設定 1 メニュー」 p.41 でも設定することができます。
- この取扱説明書は、日本語が選択された状態を想定して記載しています。
- ❸ 接続した機器を動作状態にする

接続したコンピューターなどの電源を入れ、起動します。

② 入力ボタンを押す

接続した機器の映像が映し出されます。

入力ボタンを押すたびに、映像信号が出力されている接続機器の入力に切り換わります。

■お知らせ

- 「初期設定 1 メニュー」 p.41 で [自動入力検索] を [切り] に設定 (購入時は [入り]) しておくと、入力ボタンを押すと、「入力切換] メニューが表示されます。
- 他の接続機器から映像信号が出力されていないときは、**入力**ボタンを押しても入力は切り換わらず、「他に入力信号がありません」とメッセージが表示されます。


6 設置角度を調整する

フットアジャスターで設置角度を変えて、投写画面の高さを調整することができます。

① お好みの角度になるように本機の前部を持ち上げ、フットアジャスター解除ボタンを上向きに押す

フットアジャスターが伸び、ボタンを離す とその位置に固定されます。

- ② 角度を微調整するときは、フットアジャ スターを回す
- フットアジャスターを収納するときは、本機を支えながらフットアジャスター解除ボタンを押し、そのままゆっくりと本機を降ろしてください。

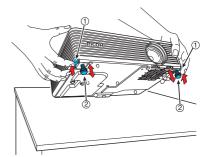


■お知らせ

•「初期設定1メニュー」の「自動台形補正」が「入り」に設定されていると、本機の設置角度に合わせて、画面の台形歪みが自動的に補正されます。自動台形補正を実行しない場合は、「自動台形補正」を「切り」に設定してください。

⑥ 画面の大きさを調整し、ピントを合わせる

- ① ズームレバーで投写画面の大きさを調整する
- ② フォーカスレバーでピントを合わせる





音声信号が入力されているときにスピーカの音量を調整できます。



基本操作(つづき)

■お願い

- ランプの特性によって、まれに明るさがわずかに変動することがあります。ご了承ください。
- 本機に使用している液晶パネルは高精度な技術で作られておりますが、一部に非点灯、 常時点灯部分が存在することがあります。これは故障ではありませんので、ご了承くだ さい。

■お知らせ

- ランプは消耗品です。長時間使用しますと映像が暗くなったり、切れて点灯しなくなったりすることがあります。これはランプの特性であり、故障ではありません。
- 本機はさまざまな種類の RGB 信号 **p.52** に対応しますが、XGA(X3131/X3241)、WXGA(WX3131)以外の信号では拡大・圧縮表示されるため画質が多少劣化します。 良好な画質でご覧いただくために、接続するコンピューターの外部出力の設定を XGA(X3131/X3241)、WXGA(WX3131)に合わせることをおすすめします。
- 液晶ディスプレイなどを用いたコンピューターの機種によっては、コンピューター側のモニター表示とプロジェクターへの出力とを同時に行なうと、画面が正しく映らない場合があります。このような場合には、コンピューターの液晶ディスプレイの表示を切ってください。液晶ディスプレイ表示の切換方法などは、コンピューターの取扱説明書を参照してください。
- 接続機器から信号が入力されていないときや、表示中に信号がなくなったときは「無信号」が表示されます。
- 本機が対応していない信号が入力されると、「非対応信号」が表示されます。
- 実行できない操作ボタンを押すと、ビープ音の設定が [入り] のとき「ピー」というビー プ音がなり、アイコン X が表示されます。
- コンピューターの DVD 再生ソフトで再生した動画映像を本機で映すと、映像の動きが不自然になることがありますが、故障ではありません。

■ 液晶パネルについて

液晶パネルには寿命があります。長くご使用いただくために以下の点にご注意ください。

- 液晶パネルの寿命をのばすために、使用していないときは必ず電源を切り、ランプが消えていることを確認してください。ランプが消えていると省エネ効果も大きくなります。
- エアフィルターがよごれて目詰まりすると、本機内部の温度が高くなり液晶パネルの 寿命を短くするとともに、故障の原因になります。こまめに清掃することをおすすめ します [0.44]。
- エアフィルターが傷んだときは、販売担当者にご相談のうえ、新しいものと交換してください。傷んだまま使用すると、ほこりやごみが本機の内部に入り、動作停止や故障の原因となります。

便利な機能を使う

■自動設定をする(オートセット)コンピューターの信号のみ

入力信号の種類に応じてサンプリング位相・周波数、画面位置、クランプなどを自動的に調整することができます。

● リモコンの自動設定ボタンを押す

処理中はアイコン が表示されます。


[**映像調整メニュー**]の[オートセット] **2.37** でも自動設定できます。

■お知らせ

- 本機が対応している入力信号 p.52 、p.53 以外では、映像が出なかったり、正しい自動調整ができないことがあります。
- 正しく調整ができなかった場合は、[映像調整メニュー] p.37 の 「位置] で手動調整してください。

■台形歪みを補正する(キーストン)

スクリーンに対し設置角度を変えて投写すると、投写画面が歪みます。 本機では、この台形歪みを補正することができます。



プロジェクターの設置角度にあわせて自動的に台形補正が行われます。


● 台形歪みを手動で補正する場合

▲ ロボタンで歪みを調整する

■お知らせ

- 台形補正のどあいや映像の内容によっては、 一部情報が欠けたり、画質が劣化する場合が あります。
- 自動台形補正が「入り」のときでも、台形補正を手動で調整できますが、設置角度に変化があると、再び自動調整されますのでご注意ください。

本体操作部





リモコン

- 自動台形補正が「入り」のときは、電源が入るたびに自動台形補正が実行されます。
- 台形補正の状態は本機の電源を切っても記憶されますので、本機とスクリーンと の設置状態が固定されている場合は、自動台形補正を「**切り**」にしておくことを おすすめします。

便利な機能を使う(つづき)

■映像を拡大する(リサイズ)

投写している映像を拡大(リサイズ)表示させることができます。

● リモコンの拡大ボタンを押す

拡大ボタンを押すたびに拡大倍率が上がります。ボタンを押し続けることもできます。



② 拡大倍率を下げるときは、リモコンの縮小ボタンを押す

縮小ボタンを押すたびに拡大倍率が下がります。ボタンを押し続けることもできます。(もとの大きさよりも小さくすることはできません)














4 縮小ボタンでもとの大きさまで戻ると、リサイズが解除されます。 リサイズ中に**戻る**ボタンを押しても、リサイズは解除されます。

■お知らせ

- リサイズ中はアイコン 一 が表示されます。
- ミュート以外の操作をしたときは、リサイズは解除されます。
- デジタル処理で拡大するため、拡大するにつれて映像があらくなります。
- 拡大中や拡大部分を移動中、まれに画像が乱れることがあります。

■映像と音声を一時的に消す(ミュート)

スクリーンに他のプロジェクターや OHP などの映像を一時的に投写したいようなとき、本機の映像と音声を消すことができます。

● リモコンの AV ミュートボタンあるいは本体操作部の戻る /AV ミュートボタンを押す

映像と音声が消えます。(もう一度 **AV ミュート**ボタンあるいは**戻る /AV ミュート**ボタンを押すと、ミュートが解除されて映像と音声が出ます)

本体操作部の**戻る / AV ミュート**ボタンは、リサイズ中、設定メニュー表示中はミュートされません。

■お知らせ

- ミュート中は、アイコン M が表示されます。
- 他の操作をすると、ミュートが解除されます。

■画質を変える

投写中の映像モードを選択します。

● リモコンの映像モードボタンを押す

ボタンを押すごとに、1/2/3の順に換わります。

- 1: 明るさ優先
- 2: 標準
- 3: 色優先

■お知らせ

• [映像調整メニュー]の[映像モード]でも切り換えることができます。 p.37

■画面サイズを変える

投写中の画面サイズを変えます。

リモコンの画面サイズボタンを押す

ボタンを押すごとに、以下の順で切り換わります。


X3131/X3241 : ノーマル/フル/スルー/ワイド WX3131 : ノーマル/フル/スルー/4:3 ズーム

■お知らせ


- スルー表示はコンピューター映像のときだけ可能です。
- ワイド、4:3 ズーム表示は、Y/PB/PR、ビデオ/S-ビデオ映像のときだけ可能です。
- [表示設定メニュー]の [画面サイズ] でも切り換えることができます。p.38 p.39
- 市販映像ソフトや放送・有線放送番組に対して、この機能を個人の視聴以外の目 的で使用すると、著作権法で保護されている著作権を侵害するおそれがあります。

リモコン









便利な機能を使う(つづき)

■映像を静止させる(フリーズ)

投写中の映像を静止させることができます。ビデオの映像を止めてプレゼンテーションしたいときなどにお使いいただけます。

● リモコンのフリーズボタンを押す 映像が静止します。(もう一度フリーズボタンを押すと、フリーズ が解除されます)

■お知らせ

- フリーズ中は、アイコン 🔯 が表示されます。
- その他の操作をすると、フリーズは解除されます。
- 本機で映像を静止させても、ビデオ機器などの映像は変化しています。
- 市販映像ソフトや放送・有線放送番組に対して、この機能を個人の視聴以外の目的で使用すると、著作権法で保護されている著作権を侵害するおそれがあります。


■パスワード設定をする

- パスワードの変更のしかた お買い上げ時のパスワードは「000000」です。

 - ② パスワード登録、設定メニューの[パスワード登録]を選択し、② ボタンを押す
 パスワード入力画面が表示されます。
 - - はじめて変更するときは「000000(ゼロを6個)」を入力する。
 - パスワードは表示されません。画面には「*」が表示されます。
 - ② 次に新しいパスワード(数字6桁)を入力する
 - **⑤** もう一度、新しいパスワードを入力する

■ お知らせ

 パスワードは忘れないようにしてください。もしパスワードを忘れた場合、 お客様ご自身で解除することはできません。
 このようなときは、お買い上げの販売担当者にお問い合わせください。



- ●パスワードの設定のしかた(「切り」から「入り」にするとき)

 - ② [パスワード登録] と [パスワード設定] のうち、[パスワード設定] を選択し、② または ③ ボタンを押す

 - ② [OK] を選択し、② ボタンを押す パスワード入力画面が表示されます。
 - ← リモコンのテンキーボタンで数字 6 桁のパスワードを入力する
 - 6 パスワード設定が「入り」に設定されます。
- パスワードが [入り] での操作のしかた
 - € 電源を入れる
 - ランプが点灯し、パスワード入力画面が表示される
 - ③ リモコンのテンキーボタンでパスワードを入力する パスワードが正しいときは、スタートアップ画面が表示され通常の状態になります。 パスワードを間違えて入力したときは、メッセージが表示され、再びパスワード入 力画面が表示されます。パスワードを 5 回間違えると自動的に電源が切れスタン バイ状態になります。
 - ■お知らせ
 - パスワード設定が「**入り**」に設定されている場合、パスワード機能が有効になるのは、電源プラグををいったん抜き再度入れたあと、最初に電源を入れたときのみです。それ以後、電源プラグを抜かずに、スタンバイ状態から電源を入れても、パスワード機能は働きません。
- ●パスワードの設定のしかた(「入り」から「切り」にするとき)

 - りモコンのテンキーボタンでパスワードを入力する
 - [パスワード登録]と[パスワード設定]のうち、[パスワード設定]を選択し、
 または ボタンを押す
 - ❷ [切り]を選択する
 - ⑤ [OK] を選択し、
 がタンを押す

メニューを使う

本機操作部やリモコンの**メニュー**ボタン **p.18** で画面にメニューを表示して、さまざまな 調整や設定をすることができます。

■設定表示の設定

メニューの図は操作説明用であり、実際の表示と異なる場合があります。


1.メニューボタンを押す [設定表示]メニューを表示させる

2.カテゴリーを選択する





②または ○でメニューを開きます。

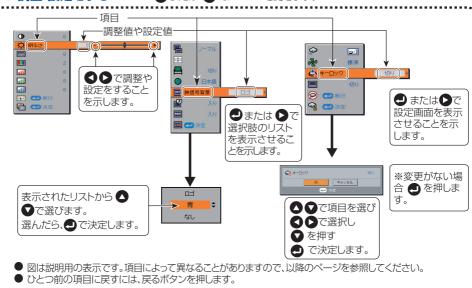

4.終了 もう一度、メニューボタンを押す

(メニュー画面は、何も操作しないと30秒で自動的に消えます。)

■映像調整メニュー

このメニューでは、映像に関する項目について調整・設定をすることができます。 入力の種類によって調整・設定ができる項目(○)とできない項目(-)があります。 (灰色で表示される項目は、そのとき選択されている入力では調整・設定ができません)

	項目◎◎	内 容	コンピューター	Y/PB/PR	ビデオ	S-ビデオ
•	コントラスト	映像のコントラスト(濃淡)を調整する	0	0	0	0
		弱<(淡<) ◆ ● 強<(濃<)				
)	明るさ	映像の明るさを調整する 暗く 4 1 明るく	0	0	0	0
	色の濃さ	映像の色の濃さを調整する				
	巴の辰こ	次く ● 農く	_	0	0	0
	シャープネス					
	- 1 - 1 - 1 - 1	ソフトに 🕽 🕒 シャープに	0	0	0	0
2	ノイズリダクション**	画面上のノイズを減らす働きを設定する		0	0	0
		入り 🗗 🗗 切り				
Π	映像モード	●を押し、映像モードを ● / ● で切り換える	0	0	0	0
		1/2/3	- C			0
10 10 10 10 10 10 10 10 10 10 10 10 10 1	赤レベル	映像の赤色を調整する	0			0
L		赤を弱く ◆ ◆ 赤を強く				
10100 101010 101010	緑レベル	映像の緑色を調整する	0		0	0
_		緑を弱く				
-	青レベル	映像の青色を調整する	0		0	0
L		青を弱く♥♥青を強く				
	NTSCモード ^{®2}	黒レベルを❹ ●で設定する				
		US : NTSC(US)モード	_	_	0	0
_		JAPAN : NTSC(JAPAN)モード				
-I=	オートセット	入力信号の種類に応じて、サンプリング	0	_	_	_
L		位相などを自動的に調整する				
	位置	● を押し、モードを 🍑 / 👽 で切り換え	0	_	_	_
		●●で調整				
		🖽 サンプリング位相	0	_	_	_
		画面のちらつきがなくなるように調整する				
		☑ サンプリング周波数	0	_	_	_
		細かい縦縞を映したときの周期的な				
		模様やちらつきがなくなるように調整する				
		→ 水平位置	0	_	_	_
		映像の水平位置を調整する				
		■ 垂直位置	0	_	_	_
		映像の垂直位置を調整する				
		☑ クランプ 1	0	_	_	_
		クランプパルスの位置を調整する				
		∞ クランプ 2	0	_	_	_
1		クランプパルスの幅を調整する				

※ 1: [ノイズリダクション] は、信号の種類によって調整できないことがあります。

※ 2: [NTSC モード] は、ビデオ信号 が [NTSC] と [NTSC4.43] のときだけ表示され、 調整できます。また、言語が日本語に設定されたときは、JAPAN に設定されます。 他の言語のときは、US に設定されます。

メニューを使う(つづき)

■表示設定メニュー

このメニューでは、画面表示に関する項目について設定をすることができます。 (灰色で表示される項目は、そのとき選択されている入力では設定ができません)

項目❹◐		内 容		
画 画面サイズ	画面サイズの設定			
	[❷ または ❷ : 設定には	はいる]→[❹ਊ:選択]→[決定:疊]		
		マル/フル/スルー/ワイド		
	WX3131 : ノーマル / フル / スルー /4:3 ズーム			
■ 上下シフト	画面サイズ設定が以下の表示の際に上下に投写映像を移動させる			
	X3131/X3241 : ワイド (1024 × 768 の範囲内)			
	WX3131 : 4:3 画面が下がる 4 ■面	ズーム(1280 × 800 の範囲内)		
│ ■ 黒板モード		するとき、投写面の色に合わせて設定	· = / • » • "	
		70り換える 切り/緑/黒/茶/	育 / ベーシュ	
│ ◎ 言語		表示に使用する言語を以下から選択	_	
		はいる]→[◆♥◆◆:選択]→[決定	-	
	English / Français / Deutsch / Italiano / Español / Português / Русский / Svenska /			
	Türkçe / Polski / Norsk / Suomi / Čeština / Magyar / Ελληνικά / Dansk / Nederlands / Română / 日本語 / 中文 (简体字) / 中文(繁體字) / 한국어 / Indonesia/			
	Nederlands / Homana / 日本語 / 中文 (同体字) / 中文 (系體子) / 한국어 / Illubriesia / 			
 無信号背景	入力信号がないときの画面			
無信号背景	[② または ♪: 設定にはいる] → [▲ ♀ : 選択] → [決定 : ❷]			
	ロゴ/青/なし			
アイコン表示	機能をガイドするアイコン	ンの表示	入り ❹ ◘ 切り	
スタート画面	電源を入れたときの初期回	画面の表示	入り 🕽 🔁 切り	
ユーザーロゴ	スタート画面および無信号	号ロゴをユーザーロゴにすることができる		
	[�または ♪: 設定にはいる]→[♪ ♀:選択]			
	□ □ゴ登録 ● を押すと登録メニューになる			
	■ 表示方法			
	背景	黒❹負責❹負		
	□□□ 確認	❷ を押す		
	■ ロゴ初期化	はい 🔵 🕽 いいえ		

● 各項目の詳しい説明

[画面サイズ]

• **ノーマル** : 映像信号のアスペクト比を変えずに、画面いっぱいに表示します

• **フル** : 1024 × 768 ドットで、画面全体に表示します。(X3131/X3241)

1280 × 800 ドットで、画面全体に表示します。(WX3131)

• **スルー** : 映像信号の解像度のまま表示します。Y/PB/PR、ビデオ、S-ビ

デオの各入力時は選択できません。

画面よりも大きい映像は画面の外にはみ出ます。映像の周波数に

よっては、映像が縦長になる場合があります。

• **ワイド** : アスペクト比が 16:9 になるように、縦方向を縮めて画面中央 (X3131/X3241) にワイド画面で表示します。コンピューター入力時は選択できま

せん。

• 4:3 ズーム: アスペクト比が4:3 になるように、縦方向を伸ばして、画面の

(WX3131) 上下に映像をはみ出して表示します。コンピューターの入力時は 第47.574.544/

選択できません。

Y/PB/PR 入力は、映像信号のアスペクト比が 16:9 のときは設定できません。

■お知らせ

• 市販映像ソフトや放送・有線放送番組に対して画面サイズ設定機能を使って、個人視聴以外の目的で元の映像と異なる縦横比で表示すると、著作権法で保護されている著作権を侵害するおそれがあります。

[上下シフト]

• [**画面サイズ**] が [**ワイド**] のときに上下に映像を移動できます。(X3131/X3241) [**画面サイズ**] が [**4:3 ズーム**] のときに上下に映像を移動できます。(WX3131)

[黒板モード]

• 黒板モードを設定することによって、スクリーンに投写したときの色合いに近づけて投写することができます

■お願い

• 投写面と同じ色で設定しても黒板、壁などの種類、色調、材質によって効果が異なりますのでご了承ください。

[無信号背景]

- ご購入時の [ロゴ] は RICOH が登録されています。
- ユーザーロゴが登録されているとき、[**ロゴ**] に設定しておくと、登録した画面 が無信号のときに表示されます。

[スタート画面]

ユーザーロゴが登録されているとき[**入り**]に設定しておくと、登録した画面がスタートアップ画面として表示されます。

[ユーザーロゴ]

コンピューターから入力されている映像の一部を静止画として取り込み、その画面 をスタートアップ画面や無信号ロゴとして表示させることができます。

メニューを使う(つづき)

〈ロゴ登録〉

- ユーザーロゴ登録のしかた
 - 登録する映像を映す
 - ② [表示設定メニュー]の[ユーザーロゴ]を選択し、● または ボタンを 押す
 - ❸ 表示された項目から〈ロゴ登録〉を選択し、❷ ボタンを押す
 - ◆ 登録確認用に登録範囲が表示され、「OK」を選択し、
 ・ ボタンを押す
 - 登録した映像が表示範囲内にない場合は、コンピューター側を操作し、画面を動かしてください。
 - ⑤ 登録するときは [はい]を選択し、
 ◎ ボタンを押す
 - 6 登録が開始される
 - 登録中はメッセージが表示されます。

■お知らせ

- <口ゴ登録>は、コンピューターの入力時に有効です。
- 登録できるサイズは、画面中央の512 × 384 ドット(X3131/X3241)、 640 × 400 ドット(WX3131)です。会社のロゴなどを登録する場合は、この 範囲内で作成してください。
- 登録できるロゴは 1 画面のみです。登録するごとに前に登録したものは消去されます。
- 絵柄の情報量によって登録時間および表示時間は異なります。
- 市販映像ソフトや放送・有線放送番組に対して、この機能を個人の視聴以外の目的で使用すると、著作権法で保護されている著作権を侵害するおそれがあります。

〈表示方法〉

登録したロゴの表示サイズを選択します。

■ : 登録した映像のサイズで画面の中央に表示します。

■ : 登録した映像を画面いっぱいに拡大して表示します。(デジタル処理で拡大するため、映像はあらくなります)

〈背景〉

[表示方法]を[中央]に設定したときの、背景画面の色を設定します。

〈ロゴ確認〉

登録したロゴを確認することができます。

〈ロゴ初期化〉

登録したロゴ、表示方法、背景の設定をご購入時の状態に戻すことができます。 (スタート画面、無信号時のロゴがご購入時の状態に戻ります)

■初期設定メニュー

このメニューでは、設置状態などの設定をすることができます。

初期設定 1 メニュー

項目❹◐	内 容		
冒 自動台形補正	常に自動台形補正を実行	入り 🕽 🔁 切り	
無信号電源オフ	無信号電源オフ 無信号状態で最後に操作したときから電源が切れるまで		
L	切り (切]れない) 🕽 🕽 30 分後	
自動入力検索	入力切換時信号のある入力だけを選ぶかを設定	入り❹♪切り	
🚱 ビープ音	操作時に操作音を出す	入り 🕽 🔁 切り	
(1) 電源オン	電源ボタンで電源を入れる(手動)か、電源コート	で電源を入れる(自動)か	
	を設定	手動 ◆ ● 自動	
	ランプパワーを設定	低 🕽 🗗 標準	

● 各項目の詳しい説明

[自動入力検索]

[入り]: 投写可能な信号を自動検索します。

入力ボタンを押すごとに、接続機器の映像信号が出力されている入力に切り換わります。接続されていても映像信号が出力されていないときは、その入力はとばされます。

[**切り**]: **入力**ボタンを押すと、[**入力切換メ** ニュー]が表示されます。

[入力切換メニュー]

入力切換 ■ コンピューター 1 ○ Y/PB/PR 1 ■ コンピューター 2 ○ Y/PB/PR 2 ■ ビデオ ○ S-ビデオ

●/○は信号のあり/無しを表示します。

■お知らせ

• 通常は [入り」にしてご使用ください。[入力切換メニュー] から直接、入力を選択したいときや画像が正しく表示されなかったときなどは、[自動入力検索] を [切り] にしてご利用ください。

[電源オン]

[**自動**] に設定した場合、電源が供給されると、本機の電源がオンになりますので、 停電復旧後などご注意ください。

[ランプパワー]

[低] に設定すると画面は暗くなりますが、冷却音を小さくできます。

メニューを使う(つづき)

初期設定2メニュー

項目❹◐	内 容		
→ 設置状態	設置状態 p.22 に合わせて投写を設定		
	(標準) 🕽 🕽 🚺 🚺 (背面天吊り) 🕞 🚺 (背面天吊り)		
ファンモード	ファンの回転を設定 標準 🔘 🧖 高		
キーロック	本体の操作ボタンをロック		
	[❷ または ♪: 設定にはいる]→[❹ ♪:入り、切りを選択]→[♥:確認]		
	→ [◆ ◆ : OK で設定完了] [キャンセル] で戻り		
クローズドキャ	クローズドキャプションの表示方法を設定		
一 プション	❷ を押し、♥ ▲ で切り換える。		
	切り/CC1/CC2/CC3/CC4/T1/T2/T3/T4		
◎ すべてを初期化	☑ を押す (パスワードとユーザーロゴは初期化されません)		
	すべての調整・設定を購入時の状態に戻す はい はい はい はい はい はい はい はい		
9 "7 "	パスワード設定 p.35		
** パスワード	● を押す → パスワード登録 / パスワード設定		

● 各項目の詳しい説明

[ファンモード]

[高] に設定すると冷却ファンの回転数が上がります。(冷却音は大きくなります) 高地(およそ標高 1500m をこえる地域)などでお使いになるときに設定してください。

• 高地以外でご使用のときは、「高」に設定しないでください。

[キーロック]

本体の操作ボタンをロックして、誤操作を防ぐことができます。(リモコンでの操作は可能です。)

キーロックは [**入り**] に設定が完了したときから適用され、本体の操作ボタンでは操作できなくなります。

キーロックの解除はリモコンでの操作で[切り]に設定するか、または本体の[戻る/AVミュート]ボタンを10秒間押しつづけても[切り]に設定することができます。(本体で操作のときはランプ、温度の2個のインジケーターが橙色に3秒点灯し、同時にビープ音がなります。)

[クローズドキャプション]

切り : クローズドキャプションを表示しません。

• **CC1-CC4**: クローズドキャプションに対応している番組やビデオなどの会話や (キャプション) ナレーションの字幕を表示します。

• T1-T4 : クローズドキャプションに対応している放送の受信が可能な状況に (テキスト) おいて、番組等に関連のない文字情報を表示します。(株式市況や 天気予報など)

■お知らせ

- [クローズドキャプション]は、ビデオ. S-ビデオの入力時に有効です。
- 本機では、クローズドキャプションに対応しています。これは、米国のFCC (Federal Communications Commission)での規定に準拠した字幕機能のことです。この規定に準拠した放送が実施されていない地域では、放送形式、信号形式が異なりますので対応できない場合があります。
- 録画状態や信号の受信状態によって、正しく表示されないことがあります。
- [**テキスト**] の利用ができない場合、黒い背景画面のみが表示されることがあります。この背景を表示しないようにするには、クローズドキャプションを「**切り**」に設定してください。

■状態表示

入力信号の情報やランプ使用時間などの情報を表示させることができます。

項目	内 容	コンピューター	Y/P _B /P _R	ビデオ	S-ビデオ
入力	入力ソースの名称	0	0	0	0
モード名	RGB入力のモード * 1	0	_	_	_
解像度	解像度(ドット数)	0	_	_	_
周波数	同期周波数	0	_	_	_
同期	同期信号極性 **2	0	_	_	_
信号フォーマット	Y/PB/PR信号のフォーマット	_	\circ	_	_
ビデオモード	ビデオ信号のカラー方式	_	_	\circ	
ランプ時間	ランプの使用時間 **3	0	0	\circ	
ランプリセットカウント	ランプ交換回数	0			
トータル時間	本機の総使用時間	0	0	0	
バージョン	ファームウェアのバージョン **4	0			

- ※ 1: RGB 対応信号のモード p.52 が表示されます。
- ※ 2: 同期信号の極性を [水平/垂直] の配置で、P(正極性), N(負極性)で表示します。
- ※ 3: [ランプ時間] はランプ交換時期 p.47 の目安として表示しています。ランプ保証時間のカウンターとしてはご使用になれません。
- ※ 4: [**バージョン**] は本機内部の制御プログラムのバージョンです。アフターサービスなどの際に参照します。

■お知らせ

• 表示された情報は、状況が変わっても更新されません。更新するときは、表示された情報をいったん消してから、もう一度表示させてください。

エアフィルターの清掃


エアフィルターは、内部へのほこりやごみの侵入を防ぐ部品です。フィルターをはずした 状態での使用は絶対におやめください。エアフィルターは、こまめに清掃していただくこ とをおすすめします。

- 100時間ごとに「エアフィルターのよごれを確認してください。」とメッセージが表示されます。 (このメッセージは使用時間が100時間を過ぎ、次に電源を入れた一回目に、映像が出たときに約30秒間表示されます。この表示は何か操作をすると消えます。)
- エアフィルターの汚れを確認し、埃、ゴミなどがついているときは、以下の手順で掃除してください。

↑ 警告 • 天吊り設置での清掃などのメンテナンスは、販売担当者に依頼すること。

- **●**電源プラグを抜く
- ②エアフィルターをはずす

エアフィルターの図の部分をつかんで引き出します。




3 掃除をする

エアフィルターのほこりやよごれを掃除機などでていねいに吸い取ります。



4 エアフィルターを差し込み

カチッと音がするまでしっかり差し込んでください。



■お知らせ

- エアフィルターにほこりがたまると、空気の通りが悪くなって本機内部の温度が上昇し、動作停止や故障の原因となります。
- エアフィルターは最後まできちんと取り付けてください。すき間があいていると、ほこりやごみが本機の内部に入り、動作停止や故障の原因となります。
- エアフィルターを水洗いしたときは、完全に乾いてから取り付けてください。
- エアフィルターが傷んだときは、販売担当者にご相談のうえ、新しいものと交換してください。傷んだまま使用すると、ほこりやごみが本機の内部に入り、動作停止や故障の原因となります。

レンズ、本体の清掃

♠ 警告 • 天吊り設置での清掃などのメンテナンスは、販売担当者に依頼すること。

■レンズの清掃

- レンズは市販のブローワーやメガネ拭き用クロス、クリーニングペーパー、レンズクリーナー等で清掃してください。
- レンズの表面は傷つきやすいため、かたいものでこすったり、たたいたりしないでください。

■本体の清掃

- 電源プラグを抜いてから清掃をしてください。
- 本機のよごれは、柔らかい布で軽くふき取ってください。
- 水でふくと内部に水がしみこんで、感電や故障の原因となることがありますので、やめてください。
- ベンジン、シンナーは絶対に使用しないでください。 変形、変色、塗装がはげるなどの原因となります。
- 化学ぞうきんは使用しないでください。



ランプの交換

ランプは消耗品です。長時間使用しますと映像が暗くなったり、ランプが切れて点灯しなくなったりすることがあります。これはランプの特性であり、故障ではありません。(ランプの寿命は使用状態によって異なります)このようなときには、新しいランプと交換してください。

⚠警告

- 天吊り設置でのランプ交換は、販売店に依頼すること。
 - 天吊り状態ではランプカバーを開けないでください。万一、ランプが破裂していると、ガラス破片が落下して危険です。また高所での作業は危険ですからランプが破裂していなくてもお客様ご自身でランプの交換は行わないでください。
- 交換の際は必ず IPSiO PJ 交換用ランプ タイプ 1 (別売) を使用すること。

⚠注意

- 使用直後のランプは高温になっているので、さわらないこと。 さわるとやけどの原因となります。十分に冷えてから(1時間以上待ってから)交換をしてください。
- 万一、ランプが割れた際には、ガラス片でけがなどをしないように取扱いに注意し (p.10)、販売担当者に修理を依頼すること。

ランプの交換(つづき)

- 電源プラグを抜く
- 2 ランプが十分に冷えるのを待つ

1時間以上待ってください。


⋒ ランプ外カバーをはずす

側面のねじ 1 個をゆるめ図のようにスライドさせて、ランプ外力バーをはずします。




🕢 内カバーをはずす

ねじ2個をはずし、ランプ内カバーをはずします。 はずしたねじは、なくさないように注意してくだ さい。

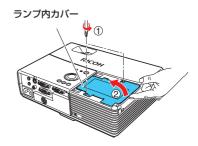


6 ランプを引き出す

ランプ固定ねじ3個をゆるめ、取っ手をおこし、 ツメを押しながらランプを引き出します。

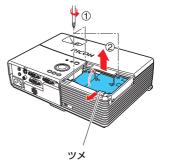

⋒ 新しいランプを取り付ける

方向を合わせ、下に当たるまで差し込み、ランプ固 定ねじ3個を回してしめます。

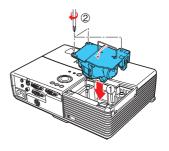


手順 ② ではずしたねじ2個で内力バーが浮かないように最後までしめます。



❸ ランプ外カバーを取り付ける

外力バーを載せ方向を合わせ、矢印の方向にスライドさせて、手順 ③ でゆるめたねじ 1 個をランプ外力バーが浮かないように最後までしめます。(ランプ外力バーは必ず取り付けてください)

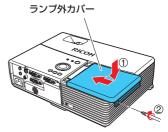

② ランプ時間をリセットする

リセットのしかたについては、ランプの取扱説明書をご覧ください。

■お知らせ、お願い

- 「**状態表示メニュー**」の中の [**ランプ時間**] に、ランプの使用時間 (目安) が表示されます。 p.43
- 「初期設定 1 メニュー」の [ランプパワー] を「標準」でご使用の場合は 2000 時間、 「低」でご使用の場合は 3000 時間を目安に交換してください。p.41
- ランプは、目安時間に達する前や交換メッセージが表示される前に、点灯しなくなることがあります。
- ランプ外カバーは、浮かないように必ず正しく取り付けてください。正しく取り付けられていないと電源がはいらない、ランプが点灯しないなど 誤動作の原因となります。
- ランプを交換するときは、必ず新品のランプを使用してください。
- ランプはガラス製品ですので、ガラス面を素手でさわったり、強い衝撃をあたえたり、 傷つけたりしないでください。(よごれ、衝撃、傷などによって割れることがあります)

- ●ランプ交換メッセージについて ―

- 本機のランプ交換メッセージは、[**ランプパワー**] の「**標準**」/「**低**」でのそれ ぞれの使用時間から適切な時期を表示します。
- 交換時期に達すると電源を入れたとき、「ランプが寿命です。交換してください。」 のメッセージが表示されます。この表示は **②** を押すと消えます。

■ 使用済みのランプについて

本機のランプには環境に有害な微量の無機水銀が使われています。使用済みのランプは、破損させないように取扱いに注意し、地方自治体の条例または規則にしたがって処理していただくか、または販売担当者までご連絡ください。

インジケーターによる異常表示

内部に異常が生じると、インジケーターの点灯とビープ音 (ピーピーピー・・・)で知らせます。

<u>e</u> 6 9 °	
ランプ 温度 電源	電源がはいらない
	⇒ 本機の異常です。
(消灯)	• 電源プラグを抜き、販売担当者に連絡してください。
ランプ 温度 電源	使用中にランプが消えた、またはランプが点灯しない
(赤点滅) (未点灯)	⇒ ランプが高温になって点灯しづらくなっているか、ランプの寿命
(赤点灯) (赤点灯) または	または本機の異常です。
ランプ 温度 電源	• 電源プラグを抜き、しばらく放置してから、再度電源を入れて
	ください。
(赤点灯) (赤点灯)	• ランプが切れたときは、新しいランプに交換してください。
	使用中に電源が切れた
ランプ温度電源	 実用中に电源が切れた ⇒ 内部が高温になっている。または気温の高いところで使っている。
(赤点滅) (赤点灯)	→ 内部が高温になっている。よたはxx温の高いところで使っている。 ・ 吸気孔、排気孔をふさがないように設置してください。
(mmn)	・電源プラグを抜き、しばらく放置してから、再度電源を入れて
	ください。
	※ 電源が切れる前にアイコン ※ が表示されます。
ランブ 温度 電源	使用中に電源が切れた
0 - 6-	
(緑点滅) (赤点灯)	- 電源プラグを抜き、販売店 <u>に連</u> 絡してください。
(83/11/23)	※ 電源が切れる前にアイコン が表示されます。
ランブ 温度 電源	
- -	使用中に電源が切れた、または電源がはいらない
(橙点滅) (赤点灯)	⇒ ランプカバーが正しく取り付けられていません。
(小無知)	電源プラグを抜き、ランプカバーを取り付けなおしてください。p.46
ランブ 温度 電源	_
	使用中に電源が切れた
(橙点灯)	⇒ 本機内部の異常です。● 電源プラグを抜き、しばらく放置してから、再度電源を入れて
(赤点灯)	電源ノブクを扱き、しはりく放直してかり、再度電源を入れて ください。
	- へんさい。 - それでも、直らない場合は、電源プラグを抜き、販売担当者に
	連絡してください。
	※ 電源が切れる前にアイコン *** が表示されます。

■お知らせ

• 異常が生じたあとは、電源プラグを抜くまで異常状態が保持されます。

故障かな・・・と思ったときは

故障かな?・・・とお思いのときは、アフターサービスをご依頼になる前に、次のことをお調べください。「**インジケーターによる異常表示**」 p.48 もご覧ください。

5万周 、	- プンケーターによる共吊衣示 」
症状	お調べいただくことがら
電源がはいらない。	・電源コードのプラグ、コネクターが抜けていませんか。
	· ランプ外カバーがはずれていませんか。 <mark>p.46</mark>
使用中に電源が切れる。	・使用している周囲の温度が高くありませんか。 p.48
	・吸気孔や排気孔がふさがれていませんか。 0.48
映像が出ない。	・入力切換が間違っていませんか。([自動入力検索)が「切り」のとき)
	p.41
	・ミュート機能が働いていませんか。 p.33
	・明るさ調整が最小になっていませんか。 2.37
	・接続に間違いがありませんか。 p.25
	・接続している機器は正常に動作していますか。
音声が出ない。	・入力ボタンを押しましたか。p.28
	· ミュート機能が働いていませんか。p.33
	・音量調整が最小になっていませんか。 0.29
	・接続に間違いがありませんか。 p.25
	・接続している機器は正常に動作していますか。
映像が正常に映らない。 	・本機が対応できない信号を入力していませんか。 p.52 p.53 ・ビデオテープなど、信号発生側に異常はありませんか。
映像がぼやける。	・レンズがよごれていませんか。 <mark>p.45</mark>
映像の一部がピントが	・レンズのピントが最良に調整されていますか。 <mark>p.29</mark>)
合わない。	・投写距離が本機の対応範囲内になっていますか。 p.23
	・本機やスクリーンの設置角度を傾けすぎていませんか。 p.29
	・サンプリング位相、シャープネスの調整がずれていませんか。
	p.37
一映像が暗い。	・明るさ、コントラストの調整がずれていませんか。 [2.37]
	・ランプ使用時間が寿命に近づいていませんか。 243
色がうすい。	・色の濃さ、赤レベル、緑レベル、青レベルの調整がずれていませ
色あいが悪い。	んか。 p.37
	・スクリーンがよごれていませんか。
	・黒板モードは正しく設定されていますか。 p.38
	・ランプ使用時間が寿命に近づいていませんか。 <mark>p.43</mark>
本体の操作キーが働か	・キーロック機能が働いていませんか。 <mark>p.42</mark>
ない。	

故障かな・・・と思ったときは(つづき)

症状	お調べいただくことがら
リモコンが働かない。	 ・リモコンの電池が消耗していませんか。 ・リモコンの電池は正しく入れられていますか。

仕 様

■一般仕様一覧

項	目	仕 様
消費電力		270 W
質 量		X3131/WX3131: 1.8kg
只		X3241: 1.9kg
外形寸法 (突起	己部含む)	X3131/WX3131: 幅 272×高さ82×奥行 189mm
1	•	X3241: 幅 295 × 高さ 82 × 奥行 196mm
キャビネット	/負	PC+ABS 樹脂および PC 樹脂 (一部マグネシウム合金)
使用環境条件 液晶パネル		温度:5℃~35℃、相対湿度:30%~70%表示
が問人イン	表示方式	透過型三板式
		X3131: 0.63型
	パネルサイズ	WX3131: 0.59型
		X3241: 0.70 型
	液晶パネル 駆動方式	TFT アクティブマトリクス
	画素数	X3131/X3241: 786,432 画素(水平 1024 ×垂直 768)
	四糸奴	WX3131: 1,024,000 画素(水平 1280×垂直 800)
レンズ		X3131/WX3131: F=1.7 ~ 1.87 f=19.2 ~ 23.00mm
		X3241: F=1.6 ~ 1.76 f=21.5 ~ 25.80mm
ランプ		高圧水銀ランプ (180W)
投写画面サイス	ζ	30~300型
		X3131: 0.89m ~ 10.93m
投写距離		WX3131: $0.94m \sim 11.58m$
		$X3241:0.89m \sim 10.94m$
スピーカー		1W (モノラル)
	ER-1 IN 端子	ミニDサブ 15 ピン RGB / Y/P _B /P _R (兼用)
	ER-2 IN 端子	ミニロサブ 15ピン RGB / Y/P _B /P _R / MONITOR OUT(兼用)
続 S-VIDEO 第	端子	ミニ DIN 4 ピン
VIDEO 端	子	RCA ピンジャック、1 V(p-p)、75 Ω
端 AUDIO IN 端子		φ 3.5mm ステレオミニジャック :1.5 V(rms)、22 kΩ以上
		COMPUTER 1 IN, 2 IN/VIDEO/S-VIDEO(兼用) ゆ 3.5 mm ステレオミニジャック
AUDIO OI	JT 端子	φ 3.5 mm ステレオミニジャック
子CONTRO	_ 端子	D サブ 9 ピン (RS-232C)

「JIS C 61000-3-2 適合品」

- ※ JIS C 61000-3-2 適合品とは、日本工業規格「電磁両立性一第3-2部: 限度値一高 調波電流発生限度値(1相当たりの入力電流が20A以下の機器)」に基づき、商用電 力系統の高調波環境目標レベルに適合して設計・製造した製品です。
- ※ 本機は、ご愛用終了時に再資源化の一助としておもなプラスチック部品に材料名を表示しています。

■お知らせ

• 意匠、仕様などは改良のため予告なく変更することがあります。

■別売品

IPSiO PJ 交換用ランプ タイプ 1 IPSiO PJ 交換用フィルター タイプ 1

仕様(つづき)

■対応信号一覧(RGB 信号)

本機は下表のRGB信号に対応しています。ただし、コンピューターの機種によっては異なることがありますので、画面にちらつきやにじみがあるときは調整してください。

解像度	モード	リフレッシュレート (Hz)	水平周波数 (kHz)	クロック (MHz)
720 x 400	720x400_85	85.039	37.927	35.500
640 x 480	VGA_60	59.940	31.469	25.175
	VGA_72	72.809	37.861	31.500
	VGA_75	75.000	37.500	31.500
	VGA_85	85.008	43.269	36.000
800 x 600	SVGA_56	56.250	35.156	36.000
	SVGA_60	60.317	37.879	40.000
	SVGA_72	72.188	48.077	50.000
	SVGA_75	75.000	46.875	49.500
	SVGA_85	85.061	53.674	56.250
832 x 624	MAC16"	74.550	49.725	57.283
1024 x 768	XGA_60	60.004	48.363	65.000
	XGA_70	70.069	56.476	75.000
	XGA_75	75.029	60.023	78.750
	XGA_85	84.997	68.667	94.500
	MAC19"	74.700	60.134	79.857
1152 x 864	SXGA1_75	75.000	67.500	108.000
* 1280 x 800	WXGA_60	59.880	49.580	83.300
1280 x 960	QuadVGA_60	60.000	60.000	108.000
	QuadVGA_85	85.002	85.938	148.500
1280 x 1024	SXGA3_60	60.020	63.981	108.000
	SXGA3_75	75.025	79.976	135.000
	SXGA3_85	85.024	91.146	157.500
1400 x 1050	SXGA+	59.978	65.317	121.750
1600 x 1200	UXGA_60	60.000	75.000	162.000
	UXGA_65	65.000	81.250	175.500
	UXGA_70	70.000	87.500	189.000
	UXGA_75	75.000	93.750	202.500
	UXGA_85	85.000	106.250	229.500

※ 1280 × 800 は、WX3131のみ

■お知らせ

• 以下の画素をこえる解像度の信号では圧縮表示されるため、情報の一部が欠けたり、画質が劣化することがあります。

X3131/X3241 : 1024 × 768 画素 WX3131 : 1280 × 800 画素


■対応信号一覧(コンポーネント信号)

信号フォーマット	fh(kHz)	fv(Hz)
480i(525i)@60Hz	15.73	59.94
480p(525p)@60Hz	31.47	59.94
576i(625i)@50Hz	15.63	50.00
576p(625p)@50Hz	31.25	50.00
720p(750p)@60Hz	45.00	60.00
720p(750p)@50Hz	37.50	50.00
1080i(1125i)@60Hz	33.75	60.00
1080i(1125i)@50Hz	28.13	50.00
1080p(1125p)@60Hz	67.50	60.00
1080p(1125p)@50Hz	56.25	50.00

■対応信号一覧(ビデオ、S- ビデオ信号)

ビデオモード	fh(kHz)	fv(Hz)	fsc(MHz)
NTSC	15.73	60	3.58
PAL	15.63	50	4.43
SECAM	15.63	50	4.25 or 4.41
PAL-M	15.73	60	3.58
PAL-N	15.63	50	3.58
PAL-60	15.73	60	4.43
NTSC4.43	15.73	60	4.43

■ COMPUTER 1 IN、COMPUTER 2 IN、MONITOR 端子のピン配列



ミニ D-sub 15 ピンコネクタ

入力信号

• RGB 入力

R, G, B信号: 0.7V(p-p) 75 Ω

水平同期信号: TTL レベル (正/負極性) 垂直同期信号: TTL レベル (正/負極性)

• Y/PB/PR入力

Y信号: 1.0V(p-p) 75 Ω PB.PR信号: 0.7V(p-p) 75 Ω


ピン番号	信号内容				
しつ田与	RGB 入力時	Y/PB/PR 入力時			
1	映像信号 (R)	色差信号 (PR)			
2	映像信号 (G)	輝度信号 (Y)			
3	映像信号 (B)	色差信号 (PB)			
4	GND	*			
5	GND	*			
6	GND(R)	GND(Pr)			
7	GND(G)	GND(Y)			
8	GND(B)	GND(PB)			
9	N.C	*			
10	GND	*			
11	GND	*			
12	N.C	*			
13	水平同期信号	*			
14	垂直同期信号	*			
15	N.C	*			

※何も接続しないでください。

仕様(つづき)

■ CONTROL 端子

● ピン配列



D サブ 9 ピンコネクタ

ピン番号	信号名	内 容
1	DCD	キャリア検出
2	TXD	送信データ
3	RXD	受信データ
4	DTR	データ端末レディ
5	GND	信号グランド
6	DSR	データセットレディ
7	RTS	送信要求
8	CTS	送信可能
9	RI	被呼表示

● インターフェースのフォーマット

1. 通信方法

RS-232C、9600bps、パリティなし、データ長:8ビット、

ストップビット:1ビット

2. 通信フォーマット

STX (02h) Command (3Byte) ETX (03h)

一回の通信で 1 コマンドだけ有効。

3. データフォーマット 入力コマンドは、ASC II 準拠の大文字英数だけ。

4. 返信

応 答 ACK (O6h) CR(ODh) Data · · · 正常終了

ACK (06h) ESC(1Bh) · · · 異常終了

非応答 NAK (15h)

コマンドを続けて送信する場合は、次のコマンドを送る前にプロジェクターの返信を待ってください。

● おもなコマンド

項目	コマンド
電源オン	PON
電源オフ	POF
OSD 表示オン	MOO
OSD 表示オフ	MO1
オートセット(RGB 入力)	PAT
状態表示オン	DON
状態表示オフ	DOF

お問い合わせ先のご案内

■消耗品に関するお問い合わせ

弊社製品に関する消耗品は、お買い上げの販売担当者にご注文ください。

■保守部品について

補修用性能部品及び消耗品の最低保有期間は、本機の製造中止後、7 年間です。 したがっ て、本期間以降は、修理をお引き受けできない場合があります。

■故障・保守サービスに関するお問い合わせ

故障・保守サービスについては、販売担当者にお問い合わせください。修理範囲(サー ビスの内容)、修理費用の目安、修理期間、手続きなどをご要望に応じて説明いたします。 転居の際は、販売担当者にご連絡ください。転居先の販売担当者をご紹介いたします。

■操作方法、製品の仕様に関するお問い合わせ

操作方法や製品の仕様については、「お客様相談センター」にお問い合わせください。



0120-000-475

- 受付時間:平日(月~金)9時~18時/土曜日9時~12時、13時~17時(祝 祭日、弊社休業日を除く)
- 通話料は無料です。
- 音声ガイダンスに従い製品別の番号をプッシュトーンでお知らせください。トーン 信号が出せない電話機の場合は、そのまましばらくお待ちいただきますとオペレー ターに接続します。
- ※お問い合わせの内容は対応状況の確認と対応品質の向上のため、通話を録音・記録 させていただいております。

http://www.ricoh.co.ip/SOUDAN/index.html

保守サービスのために必要な補修用性能部品および消耗品の最低保有期間は、本製品 の製造中止後、7年間です。したがって、本期間以後は、修理をお引き受けできない 場合があります。

株式会社リコー

東京都中央区銀座8-13-1 リコービル 〒104-8222 http://www.ricoh.co.jp/

FAQ

プロジェクターについての疑問や質問は、よくある質問をまとめた FAQ をご覧ください。 リコーのホームページ(http://www.ricoh.co.jp/)で、よくある質問に対する回答集を ご覧いただけます。

■お知らせ

- インターネットに接続している場合に利用できます。
- インターネットの通信料金がかかります。
- FAQ ページ: http://www.ricoh.co.jp/support/ga/

消耗品について

消耗品の商品名をご確認ください。

ご注文の際は、ご購入された販売担当者までご連絡ください。

■交換用ランプ

IPSiO PJ 交換用ランプ タイプ 1

■エアフィルター

IPSiO PJ 交換用フィルター タイプ 1

関連商品について

RGB ケーブル、天吊り金具などがあります。

関連商品については、販売担当者までお問い合わせください。

お客様登録の方法

製品保証、保守サービスやサポートなどの提供をスムーズに受けられるよう、必ずお客様 登録を行ってください。

お客様登録の方法は、お客様登録はがきを返送していただく方法と、インターネットで登録する方法の 2 種類があります。

■ お知らせ

- 保証書の再発行はできませんので、大切に保管してください。
- ご登録がない場合は保守サービスなどの手続きに時間がかかる場合があります。
- どちらか 1 つの方法でお客様登録してください。

はがきで登録する

はがきでお客様登録をします。

必要事項をご記入の上、ご返送ください。

■お知らせ

• 登録はがきを返送された場合は、オンラインでの登録は不要です。

インターネットで登録する

インターネットでお客様登録をします。

「製品名」と「製造機番(製品番号)」の入力が必要ですので、プロジェクターに付属の「保証書」をご用意ください。

■お知らせ

- インターネットに接続している場合に利用できます。
- インターネットの通信料金がかかります。
- インターネットで登録される場合、お客様登録はがきの送付は不要です。


リコーホームページからご登録ください。

お客様登録ページ: http://www.ricoh.co.jp/IPSiO/regist/

RICOH

IPSiO PJ X3131 IPSiO PJ WX3131 IPSiO PJ X3241 PROJECTOR

OWNER'S MANUAL

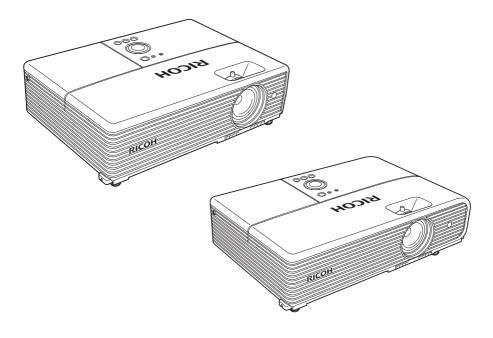

CONTENTS

Pre	na	ra	tio	ns
	Po	па	LIU	113


Checking the package contents	62
Names of each part on the main unit	
Names of each part on the control panel and remote control	
Names of the terminals on the rear panel	
Preparing and using the remote control	67
Placement	68
Connection	71
Operations	
Turning the power on and off	
Basic operations	74
Using handy features	
Using auto setting (For computer input only)	77
Correcting the keystone distortion	77
Resizing image	
Cutting off the picture and sound temporarily (Mute)	79
Changing picture mode	79
Changing screen size	
Freezing the image (Freeze)	80
Setting the password	
Using the menus	
Setup using the Setting display	82
The image adjustment menu	
The display setting menu	
The Default setting menu	
	88

Maintenance

Lamp replacement	
Air filter cleaning	95
Lens and main unit cleaning	96
Others	
Trouble indications	97
Troubleshooting	98
Specifications	

Checking the package contents

Please make sure that the following items are included in the box, along with the main unit. If any item is missing, immediately contact the store where you purchased the product.

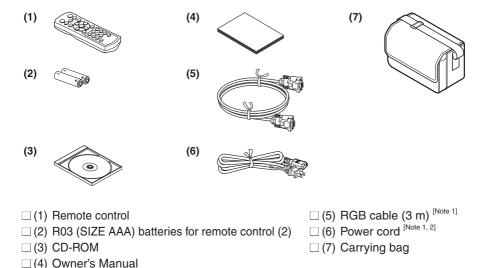

Notes

- 1: To maintain original performance, always use the supplied cables.
- 2: The shape and number of supplied power cords vary depending on the product destination.

Save Original Packing Materials

The original shipping carton and packing materials will come in handy if you ever have to ship your projector. For maximum protection when shipping your projector, repack the set as it was originally packed at the factory.

♦The Supplied CD-ROM

The supplied CD-ROM contains an owner's manual including information not available for the printed Owner's manual (Getting started) in Portable Document Format (PDF). Please use **Acrobat Reader 5** or later version to view the manual.

■ Adobe® Acrobat® Reader® or Adobe® Reader®


The supplied CD-ROM does not contain **Acrobat® Reader®**. If you cannot read PDF files, please install **Acrobat Reader** software in your computer by downloading it from the Adobe Systems website.

■ Viewing the manual

Insert the CD-ROM in the CD-ROM drive of your computer. On the installation screen, click the title of the manual you want to read.

If the installation screen does not appear, double-click the PDF file on the CD-ROM. Acrobat® Reader® launches, and the Owner's Manual cover and list of bookmarks appear. Click on a bookmark title to view that section of the manual. Click on to view a reference page with related information. See the Help menu for more information about Acrobat® Reader®.


Names of each part on the main unit

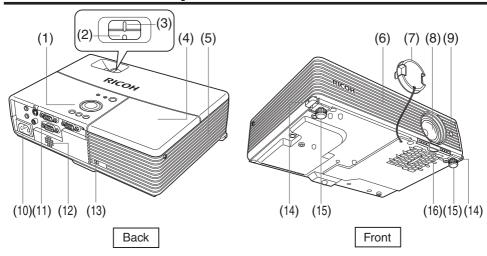


	Name	:	Function
(1)	Control panel	:	Operates the projector. p.64
(2)	Zooming lever	:	Adjusts screen size. p.75
(3)	Focusing lever	:	Adjusts screen focus. p.75
(4)	Lamp cover	:	Remove to replace lamp. p.92
(5)	Air exhaust	:	Expels air that has grown hot inside the projector.
(6)	Air intake	:	Draws in air from outside the projector for internal cool
(7)	Lens cap	:	down. Replace the cap when not using the projector to protect the lens.
(8)	Lens	:	Projects expanded image.
(9)	Infrared remote sensor	:	Senses commands from the remote control. p.67
(10)	AC IN socket	:	Connects the supplied power cord here.
(11)	Terminals on the rear panel	:	Connects external devices. p.66
(12)	Speaker	:	Outputs audio sound.
(13)	Antitheft lock slot	:	Attach a safety cable or any other antitheft device.
(14)	Foot adjuster release button	:	Press to set up or stow the foot adjuster. p.75
(15)	Foot adjuster	:	Adjusts the vertical projection angle. p.75
(16)	Air filter	:	Prevents dirt and dust from getting into the inside of the projector. p.95

Names of each part on the control panel and remote control

Control panel

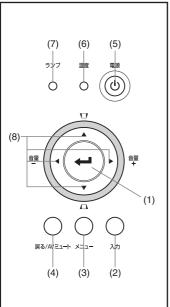

Remote Control

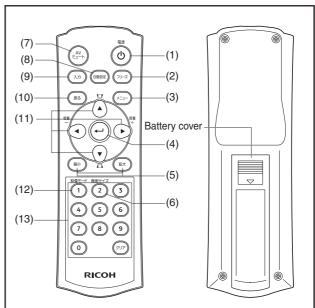

Name : Main Function

Control panel

(1) ENTER button : Accepts the selected mode.

(2) INPUT button : Selects input. p.74

(3) MENU button : Displays menus. p.82

(4) RETURN/MUTE button : Goes back one screen. Also, cuts off the picture and

sound temporarily. p.78

(5) ON/STANDBY button/ : Turns the power on/off (standby). p.72

ON/STANDBY indicator : Displays whether power is on or off (standby). p.72

(6) TEMP indicator : Lights when internal temperature is too high. p.97

(7) LAMP indicator : Displays lamp mode. p.97

(8) Selection button : Menu selections and adjustments, volume control,

Keystone adjustment, etc.

Remote control

(1) ON/STANDBY button : Turns the power on/off (standby). p.72

(2) FREEZE button : Pauses image. p.80
 (3) MENU button : Displays menus. p.82

Name : Main Function

(4) ENTER button : Accepts the selected mode.

(5) ZOOM IN/ZOOM OUT button: Changes the zoom ratio of the image. p.78

(6) SCREEN SIZE button : Changes screen size. p.79

(7) MUTE button : Cuts off the picture and sound temporarily. p.79

(8) AUTO SET button : Performs auto-adjustment of input signals from computer. p.77

(9) INPUT button : Selects input. p.74

(10) RETURN button : Goes back one screen.

(11) Selection button : Menu selections and adjustments, volume control,

Keystone adjustment, etc.

(12) PICTURE button : Changes image mode. p.79


(13) Ten-Key button : Use when entering password.

Ose when entening password.					
Remote control button	Input items	Remote control button	Input items		
1	[1]	7	[7]		
2	[2]	8	[8]		
3	[3]	9	[9]		
4	[4]	0	[0]		
5	[5]	207	Deletes one character.		
6	[6]				

Note

For the remainder of this manual, buttons are referred to as follows:
 Selection buttons ⇒ ♠ ♠ ♠ ; ENTER button ⇒ ♠

Names of the terminals on the rear panel

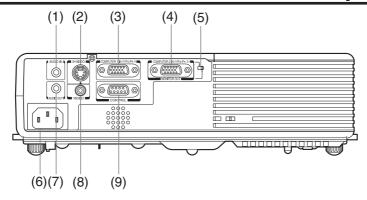

	Name		Wall Full Cloth
(1)	AUDIO IN terminal	:	Input audio signals from a computer or video equipment. (Multiple use for COMPUTER 1 IN/2 IN, VIDEO and S-VIDEO)
(2)	S-VIDEO terminal	:	Input S video signals from video equipment.
(3)	COMPUTER 1 IN (Y/PB/F	> _R	1) terminal
		:	Input analog RGB signal from a computer, or a component video signal (Y/P _B /P _R) from video equipment.
(4)	COMPUTER 2 IN (Y/PB/F	> _R	2) terminal/MONITOR OUT terminal
		:	Inputs analog RGB signal from a computer or a component video signal (Y/PB/PR) from video equipment. It can also be used as MONITOR OUT terminal by the switch of (5).
(5)	Switch	:	Switches between COMPUTER 2 IN and MONITOR OUT.
(6)	AC IN socket	:	Connects the supplied power cord here.
(7)	AUDIO OUT terminal	:	Outputs audio signals.
(8)	VIDEO terminal	:	Input video signals from video equipment.
(9)	CONTROL terminal	:	When operating the projector via a computer, connect this

to the controlling computer's RS-232C port. p.103


: Main Function

Name

Preparing and using the remote control


■ Loading dry-cell batteries into the remote control

1 Remove the battery cover.




2 Insert the dry-cell batteries.

Be sure to align the plus and minus ends of the batteries properly.



Two batteries (R03, SIZE AAA) are used.


③ Replace the battery cover.



Operating the remote control

Point toward the projector's infrared remote sensor, and press any button on the remote control.

· Operating the projector from the front

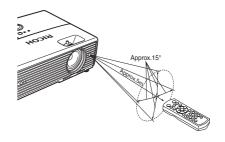

When operating the remote control from behind the projector, the infrared signal is reflected on the projecting surface and may travel a shorter distance to reach the projector depending on the shape and material of the projecting surface.

Dry-cell batteries

- Before using the batteries, be sure to observe the Safety Precautions described in previous pages.
- Remove batteries from remote control when not using for extended periods.
- If the remote control stops working, or if its range decreases, replace all the batteries with new ones. (2 batteries (R03, SIZE AAA))
- Keep the batteries away from the reach of children.
 Batteries are choking hazards and can be very dangerous if swallowed. If the batteries are swallowed, seek medical assistance immediately.


The remote control

- The remote control may fail to operate if the infrared remote sensor is exposed to bright sunlight or fluorescent lighting.
- Do not drop or bang.
- · Do not leave in hot or humid locations.
- Do not allow it to get wet or place it on top of wet objects.
- · Do not take apart.
- In rare cases, ambient conditions could impede the operation of the remote control. If this happens, point the remote control at the main unit again, and repeat the operation.

Placement

Placement Styles

As shown in the figures below, this device can be placed in 4 different styles. The factory setting is "floor-mounted front projection." Set the [**Projection mode**] in the **Default setting 2** menu p.89, in accordance with your needs.

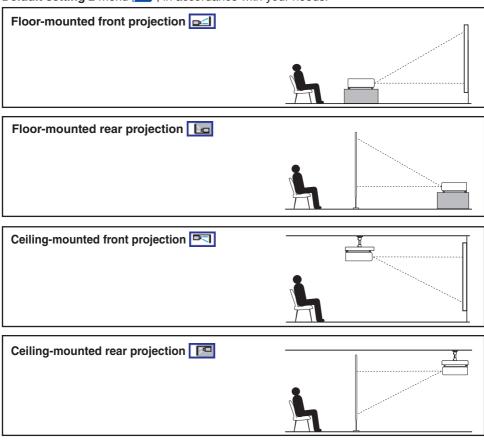


↑ WARNING

- Always obey the instructions listed in IMPORTANT SAFETY INSTRUCTIONS when placing the unit. Attempting to clean and replace the lamp in a high location by yourself may cause you to fall, resulting in injury.
- If you wish to mount the projector on the ceiling, be sure to ask your sales representative before doing so. Mounting the projector on a ceiling requires special ceiling brackets (sold separately) and specialized knowledge. Improper mounting could cause the projector to fall, possibly resulting in injury and damage, to the unit.
- If the projector is ceiling-mounted, install the breaker for turning off the power in case of anomaly. Let everyone involved with the use of the projector know that fact.

Projection Distance and Size

Use the figures, tables, and formulas below to determine the projection size and projection distance. (Projection sizes are approximate values for full-size picture with no keystone adjustment.)

PJ X3131

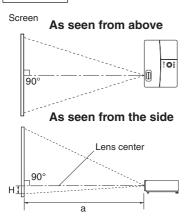


 \boldsymbol{a} is the distance (m, feet) between the lens and the screen, and corresponds to a range of 0.89 m (2.92 ft.) to 10.93 m (35.86 ft.). \boldsymbol{H} is the height from the image bottom to the center of the lens.

a (min length) -	Projection size (inches) - 0.795
	32.885
a (max length) =	Projection size (inches) - 0.673
	27.397

Projection	Projection				
size	min length (zooming max)	max length (zooming min)	Height (H)		
30 inches	0.89 m (2.92 ft.)	1.07 m (3.51 ft.)	6.50 cm (0.21 ft.)		
40 inches	1.19 m (3.90 ft.)	1.44 m (4.72 ft.)	8.70 cm (0.29 ft.)		
50 inches	1.50 m (4.92 ft.)	1.80 m (5.91 ft.)	10.90 cm (0.36 ft.)		
60 inches	1.80 m (5.91 ft.)	2.17 m (7.12 ft.)	13.10 cm (0.43 ft.)		
70 inches	2.10 m (6.89 ft.)	2.53 m (8.30 ft.)	15.20 cm (0.50 ft.)		
80 inches	2.41 m (7.91 ft.)	2.90 m (9.51 ft.)	17.40 cm (0.57 ft.)		
90 inches	2.71 m (8.89 ft.)	3.26 m (10.70 ft.)	19.60 cm (0.64 ft.)		
100 inches	3.02 m (9.91 ft.)	3.63 m (11.91 ft.)	21.80 cm (0.72 ft.)		
120 inches	3.63 m (11.91 ft.)	4.36 m (14.30 ft.)	26.10 cm (0.86 ft.)		
150 inches	4.54 m (14.90 ft.)	5.45 m (17.88 ft.)	32.70 cm (1.07 ft.)		
200 inches	6.06 m (19.88 ft.)	7.28 m (23.88 ft.)	43.50 cm (1.43 ft.)		
250 inches	7.58 m (24.87 ft.)	9.10 m (29.86 ft.)	54.40 cm (1.78 ft.)		
300 inches	9.10 m (29.86 ft.)	10.93 m (35.86 ft.)	65.30 cm (2.14 ft.)		

PJ WX3131

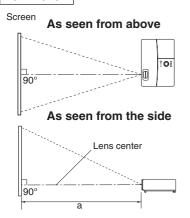

a is the distance (m, feet) between the lens and the screen, and corresponds to a range of 0.94 m (3.08 ft.) to11.58 m (37.99 ft.).


The lens center is in the same level with an image bottom.

a (min length) -	Projection size (inches) - 0.758
	31.022
a (may length) -	Projection size (inches) - 0.643
a (max length) -	25.845

Projection	Projection distance a		
size	min length (zooming max)	max length (zooming min)	
30 inches	0.94 m (3.08 ft.)	1.14 m (3.74 ft.)	
40 inches	1.27 m (4.17 ft.)	1.52 m (4.99 ft.)	
50 inches	1.59 m (5.22 ft.)	1.91 m (6.27 ft.)	
60 inches	1.91 m (6.27 ft.)	2.30 m (7.55 ft.)	
70 inches	2.23 m (7.32 ft.)	2.68 m (8.79 ft.)	
80 inches	2.55 m (8.37 ft.)	3.07 m (10.07 ft.)	
90 inches	2.88 m (9.45 ft.)	3.46 m (11.35 ft.)	
100 inches	3.20 m (10.50 ft.)	3.84 m (12.60 ft.)	
120 inches	3.84 m (12.60 ft.)	4.62 m (15.16 ft.)	
150 inches	4.81 m (15.78 ft.)	5.78 m (18.96 ft.)	
200 inches	6.42 m (21.06 ft.)	7.71 m (25.30 ft.)	
250 inches	8.03 m (26.35 ft.)	9.65 m (31.66 ft.)	
300 inches	9.65 m (31.66 ft.)	11.58 m (37.99 ft.)	

Placement (Continued)

PJ X3241

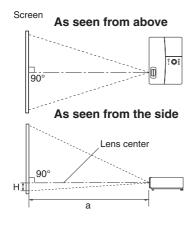

a (min length) =
$$\frac{\text{Projection size (inches) - 0.890}}{32.863}$$
a (max length) =
$$\frac{\text{Projection size (inches) - 0.748}}{27.363}$$


Duningtion	Projection distance a		
Projection size	min length (zooming max)	max length (zooming min)	Height (H)
30 inches	0.89 m (2.92 ft.)	1.07 m (3.51 ft.)	6.50 cm (0.21 ft.)
40 inches	1.19 m (3.90 ft.)	1.44 m (4.72 ft.)	8.70 cm (0.29 ft.)
50 inches	1.49 m (4.89 ft.)	1.80 m (5.91 ft.)	10.90 cm (0.36 ft.)
60 inches	1.80 m (5.91 ft.)	2.17 m (7.12 ft.)	13.10 cm (0.43 ft.)
70 inches	2.10 m (6.89 ft.)	2.53 m (8.30 ft.)	15.20 cm (0.50 ft.)
80 inches	2.41 m (7.91 ft.)	2.90 m (9.51 ft.)	17.40 cm (0.57 ft.)
90 inches	2.71 m (8.89 ft.)	3.26 m (10.70 ft.)	19.60 cm (0.64 ft.)
100 inches	3.02 m (9.91 ft.)	3.63 m (11.91 ft.)	21.80 cm (0.72 ft.)
120 inches	3.62 m (11.88 ft.)	4.36 m (14.30 ft.)	26.10 cm (0.86 ft.)
150 inches	4.54 m (14.90 ft.)	5.46 m (17.91 ft.)	32.70 cm (1.07 ft.)
200 inches	6.06 m (19.88 ft.)	7.28 m (23.88 ft.)	43.50 cm (1.43 ft.)
250 inches	7.58 m (24.87 ft.)	9.11 m (29.89 ft.)	54.40 cm (1.78 ft.)
300 inches	9.10 m (29.86 ft.)	10.94 m (35.89 ft.)	65.30 cm (2.14 ft.)

a is the distance (m, feet) between the lens and the screen, and corresponds to a range of 0.89 m (2.92 ft.) to 10.94 m (35.89 ft.). **H** is the height from the image bottom to the center of the lens.

Connection

Before connection

- · Read the owner's manual of the device you are connecting to the projector.
- Some computers cannot be used with or connected to this projector. Check for an RGB output terminal, supported signal p.101, etc.
- Turn off the power of both devices before connecting.
- The figure below shows sample connections. This does not mean that all of these devices can or must be connected simultaneously. (Dotted lines mean items can be exchanged.)

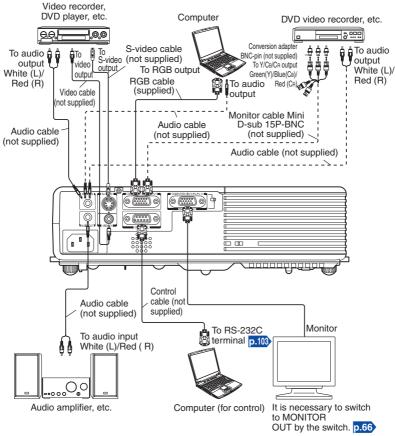

* The connection for COMPUTER 1 IN terminal described here is also applicable for COMPUTER 2 IN terminal.

Notes


- When COMPUTER 2 IN terminal is used as MONITOR OUT terminal, the signal which is input to COMPUTER 1 IN terminal is output.
- Signals are output from MONITOR OUT terminal even in standby mode. However, from AUDIO OUT terminal, no audio signal is output.
- A computer monitor cannot accept Y/P_B/P_R signals correctly.
- The AUDIO IN terminal can be used for devices connected to COMPUTER 1 terminal, COMPUTER 2 terminal, VIDEO terminal and S-VIDEO terminal.
- When an AUDIO OUT terminal is connected, sound is not output from the projector speaker.
- Output volume of AUDIO OUT terminal can be adjusted by the VOL button.

Turning the power on and off

■ Connecting the power cord

- Insert the power cord connector into the AC IN socket of the projector.
- Insert the power cord plug into a wall or other power outlet.

The ON/STANDBY indicator flashes green and the projector enters standby mode.

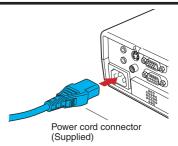

■ Turning the power on


Removing the lens cap


Be sure to remove the lens cap when the power is turned on. If the cap is left on the projector, it could become deformed due to heat.



Press the ON/STANDBY button.

The power turns on with a beep sound (if the beep sound is set to [**On**]), and the ON/STANDBY indicator flashes orange, and then flashes green. After a moment, the start-up screen appears.

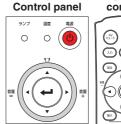



Remote

CAUTION

- Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyesight.
- Do not block the air intake or exhaust. Doing so could cause a fire due to internal overheating.
- Do not place your hands, face, or other objects near the air exhaust, the lamp cover or the bottom of the unit. Doing so could result in injury and/or damage the object.

Notes

- The start-up screen will disappear after a moment. You can configure the system to
 prevent the start-up screen from appearing. To do this, use the **Display setting** menu
 p.85
- The first time you use the projector after purchase, after the start-up screen disappears, the start menu is displayed p.74.
- You can disable the beep sound in the **Default setting 1** menu p.88.
- When [Key lock] is [On], the operation buttons of the projector do not work p.89).
- When [Password] is [On], enter password then the start-up screen is displayed after the Password entry screen disappears p.81).
- Do not touch the lens directly with your hand.
 If fingerprints or stains are left on the projection lens surface, they may interfere with the projector's ability to project images on the screen.

■ Turning the power off


Press the ON/STANDBY button.

When the setting of beep sound is **[On]**, the projector beeps, and a message appears on the screen, confirming that you wish to shut off the power. To shut off the power, press the ON/STANDBY button again. If you do not wish to shut off the power, wait for a while without conducting any operations. This message will disappear after a moment. (This operation is no longer valid after the message disappears.)

Press the ON/STANDBY button again.


When the setting of beep sound is [On], the projector beeps, and the screen disappears, but the internal cooling fan continues to operate. Then, the projector goes into standby mode.

During cooling, the ON/STANDBY indicator flashes. While the indicator is flashing, the power can not be turned back on. There is no problem with unplugging the power cord in this state.

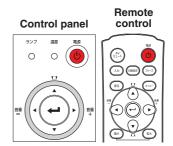

1 Replace the lens cap.

After use, replace the lens cap.



Note

 The projector consumes about 4.5W of power in standby. We recommend that you unplug the power cord if you will not be using the projector for an extended period.

Precautions

- When you wish to restart the projector again right after turning off the power, give the lamp time (about 5 minutes) to cool before plugging it back in. If the lamp overheats, it may fail to light.
- Right after turning off the power, the unit may become very hot, especially air exhaust, lamp cover or the bottom of the unit. Please handle with care to avoid burn injuries.

Basic operations


Turn on the power.

Turn on the power by following the instructions in "Turning the power on" p.72.

Select the language and the lamp power (When using the first time).

When the projector is used for the first time after purchase, the start menu for language (to display the menus and messages on the screen) and lamp power selection and configuration is displayed in Japanese. (If the screen is out of focus, adjust it according to the step **6**.)

① Use the ♠, ♠, ♦ or ▶ button to select the desired language and press the ❷ button.

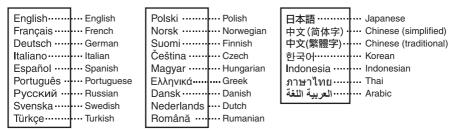

Message for setup confirmation is displayed in a selected language. Then, the menu for lamp power selection and configuration is displayed. It is automatically set as Standard. To change the setting, follow the step (2).

② Use the ♠ or ♠ button to select the lamp power and press the ♠ button.

The lamp power, if selected, will be toggled without pressing the button. The display automatically disappears in a few seconds.

- **■** Notes
- When the projector is turned on the next time, the start menu does not appear upon startup. However, if [Reset all] is executed from the Default setting 2 menu p.89, the start menu will be displayed the next time when the power is turned on.
- The language can also be set via the **Display setting** menu p.85 and Lamp power via the **Default setting 1** menu p.88.
- This owner's manual assumes that English has been selected.
- Activate the connected device.

Turn on and start the connected device such as a computer.

Press the INPUT button.

An image of the connected equipment is projected.

Each time you press the **INPUT** button, it switches to the input of the connected equipment that is outputting video signals.


Notes

- When [Auto input search] is set to [Off] in the Default setting 1 menu p.88
 (factory setting is [On]), the Input select menu appears if you press the INPUT button.
- If no signal is being output from the connected equipment, pressing the INPUT button
 does not change the input and "There is no other input signal." message will appear.

6 Projector placement angle adjustments

The placement angle and the height of the projected image can be adjusted by the foot adjuster.

- Lift up the front of the projector to the desired angle, then press the foot adjuster release button upward.
 The foot adjuster extends. Release the button to lock the position.
- ② To fine adjust the angle, twist the foot adjuster.
- To stow the foot adjuster, hold up the projector while pressing the foot adjuster release button, then slowly lower the projector.

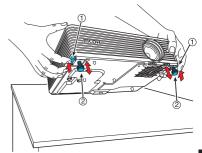


Note

When [Auto keystone] is set to [On] in the Default setting 1 menu, the keystone
distortion will automatically be corrected based on the projector placement angle. If
you do not desire the automatic keystone correction, set [Auto keystone] to [Off].

6 Adjusting the screen size and focus

- 1) Use the zooming lever to adjust the screen size.
- 2 Use the focusing lever to adjust the focus.



Front

Adjusting the volume with the ◆ ▶ buttons

The speaker volume can be adjusted when an audio signal is being input.

Basic operations (Continued)

Precautions

- Lamp characteristics may rarely cause the brightness to fluctuate slightly.
- The LCD panel is made using extremely advanced technology. There may be black spots
 (pixels that do not light) or bright spots (pixels that are constantly lit) on the panel. These
 are intrinsic characteristics of the technology and are not malfunctions.

■ Notes

- A lamp is consumable item. If used for extended periods, images will appear dark, and the lamp could burn out. This is characteristic of a lamp, and is not malfunction. (The lifetime of the lamp depends on conditions of use.)
- Although this projector supports a wide range of RGB signals [2.10], any resolutions not supported by this projector (XGA for X3131/X3241, WXGA for WX3131) will be expanded or shrunk, which will affect image quality slightly. To view high-quality images, set the computer's external output to XGA for X3131/X3241, WXGA for WX3131.
- With some models of computer having LCD displays or the like, displaying images simultaneously on the projector and the monitor's display may prevent the images from displaying properly. If this happens, turn off the computer's LCD display. For information on how to turn off the LCD display, see the computer's owner's manual.
- If no signal is being input from the connected equipment or signal input is stopped while projecting, the "No signal" message will appear.
- If a signal not supported by the projector is input, the "Unsupported signal" message will appear.
- If an unavailable operation button is pressed, the icon will appear with a beep sound (if the beep sound is set to [On]).
- Moving pictures played back on computers using DVD software may appear unnatural when projected with this projector. However, it is not a malfunction of the projector.

LCD Panels

LCD panels wear out. In order to prolong the lifetime of your LCD panel, take the following precautions.

- In order to extend the lifetime of the LCD panel, always turn off the power when not in use, and make sure that the lamp is off. Keeping the lamp off is also very effective at saving electricity.
- If the air filter becomes dirty and clogged, the projector's internal temperature will rise, shortening the lifetime of the LCD panel and causing malfunctions. We recommend regular and thorough cleaning of the air filter p.95.
- If the air filter becomes damaged, replace it. Contact your sales representative for a
 new filter. If you continue to use the projector when its filter is damaged, dust and dirt
 will enter the interior and this could cause the projector to stop working or break down.

Using handy features

■ Using auto setting (For computer input only)

This function automatically sets up the projector to the optimum state. It sets up sampling phase, frequency and screen position, for each type of the input signal by using simple operations.

Press the remote control's AUTO SET button.

The icon will appear during processing.
You can set as well by selecting [Auto setting] in the Image adjustment menu p.83.

Remote control


Notes

- The image may not be projected or auto adjustment/setting may not be performed correctly for input signals other than those supported by the projector p.101, p.103.
- If auto setting fails adjustment, adjust manually with [Position] in the Image adjustment menu p.83.

■ Correcting the keystone distortion

When the projector placement angle against the screen is changed while projecting the image, the picture will undergo keystone (trapezoidal) distortion.

This projector is capable of correcting this keystone distortion.




- The keystone distortion will be corrected automatically based on the projector's placement angle.
- Adjusting Keystone distortion Manually

Use the \(\mathbb{O} \) buttons for keystone adjustment.

■ Notes

- Depending on the amount of keystone adjustment and the content of images, some information may be lost, or the picture quality may suffer.
- Even if [Auto keystone] is set to [On], keystone distortion can be adjusted manually. Note that if you change the position or angle of the projector, automatic keystone correction will be performed again.

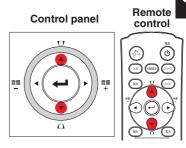

- When [Auto keystone] is set to [On], the automatic keystone correction will be performed each time the power is turned on.
- The keystone correction settings are memorized after the power has been turned off.
 Therefore, it is recommended that you set [Auto keystone] to [Off], if the case is that
 the projector placement angle against the screen remains unchanged and you do not
 wish to change the keystone adjustment that you set.

Using handy features (Continued)

■ Resizing image

The projected image can be resized (zoomed in/out).

Press the remote control's ZOOM IN button.


Each time you press the ZOOM IN button, zoom ratio is up. You can keep pressing.



To zoom out, press the remote control's ZOOM OUT button.

Each time you press the ZOOM OUT button, zoom ratio is down. You can keep pressing. (However, the image cannot be smaller than the original

(However, the image cannot be smaller than the original size.)



To move the area to zoom in, use the ♥♥♥ buttons.

You can keep pressing.



Remote control

ď

When the image returns to the original size by pressing ZOOM OUT button several times, the zoom will be reset.

Pressing the RETURN button during resizing also resets the zoom.

Notes

- The icon appears while resizing.
- · Operating a function other than Mute will release resizing.
- As zooming is processed digitally, the image quality is degraded in larger zoom ratio.
- During resizing or moving the zooming area, the image may be distorted.

■ Cutting off the picture and sound temporarily (Mute)

When you want to project the images of another projector, overhead projector, etc. temporarily, this projector's images and sound can be turned off.

Press the remote control's MUTE button or the RETURN/ MUTE button on the projector control panel.

The picture and sound are cut off. (Pressing the **MUTE** button or the **RETURN/MUTE** button again cancels the Mute function and restores the picture and sound.)

The **RETURN/MUTE** button on the control panel cannot be used for muting in the following situations:

- The projected image is resized.
- A menu is displayed.

Notes

- The quicon will appear while mute is in effect.
- Operating any other functions will also cancel the muting.

■ Changing picture mode

The projected image mode can be selected.

Press the remote control's PICTURE button.

Pressing the button switches 1/2/3 in turn.

- 1: Bright
- 2: Standard
- 3: True color

Note

 [Picture mode] of the Image adjustment menu has the same function p.83.

■ Changing screen size

The screen size for the projected image can be changed.

Press the remote control's SCREEN SIZE button.

Pressing the button switches in turn as follows:

X3131/X3241 : Normal/Full/Thru/Wide WX3131 : Normal/Full/Thru/4:3 zoom


Notes

- Thru display is available for Computer-input images.
- Wide or 4:3 zoom display is available for Y/PB/PR, Video and S-video-input images.
- [Screen size] of the Display setting menu has the same function p.85 p.86.
- If you use this function on commercial video software, broadcast or cablebroadcasting except for the purpose of your private viewing and listening, it may infringe the copyright protected by the copyright laws.


Remote control











Using handy features (Continued)

■ Freezing the image (Freeze)

The projected image can be frozen. This function is to be used to pause a video during a presentation, etc.

Press the remote control's FREEZE button.

The picture pauses. (The Freeze function is released by pressing the **FREEZE** button again.)

Notes

- The icon will appear while freeze is in effect.
- Other operations will also release the freeze.
- Even if an image is frozen on the projector, the pictures are running on the video or other equipment.
- If you use this function on commercial video software, broadcast or cable-broadcasting except for the purpose of your private viewing and listening, it may infringe the copyright protected by the copyright laws.

Remote control



■ Setting the password

- How to change password The default password is 000000.
- Select [Password] in the Default setting 2 menu and press the or button.
- Select [Password registration] in the password registration, setting menu, and press the button.
 - The password entry screen is displayed.
- Enter the current password (6-digit number) using numeric keys of the remote control.
 - Enter [000000] (6 zeros) for the first change.
 - The password is not displayed. Instead it appears as [******].
- Enter a new password (6-digit number).
- Re-enter the same password for confirmation.

Note

 Please do not forget your password. If you forget the password, you can not release the password by yourself.
 In such a case, please inquire your sales representative.

- How to set password (from [Off] to [On])
- Select [Password] in the Default setting 2 menu and press the or button.
- Select [Password setting] next, and press the or button.
- Select [On].
- Select [OK] and press the button.
 The password entry screen is displayed.
- Enter the password using numeric keys of the remote control.
- The password setting will be set as [On].
- How to operate when password is [On]
- Turn on the power.
- The lamp lights and the password entry screen appears.
- (3) Enter the password using numeric keys of the remote control. If the entered password is correct, the start-up screen appears and the projector goes into normal operation. If the password is wrong, a message appears to prompt you to re-enter the password, and again the password entry screen is displayed. If you enter a wrong password for more than 5 times, the projector will automatically power off and enter standby mode.
 - **■** Note
 - When the password setting is [On], the password function will be enabled only
 when the projector is restarted after the power cord has been unplugged.
 The password that you set will not be enabled when restarting from standby mode
 without unplugging the power cord.
- How to set password (from [On] to [Off])
- Select [Password] in the Default setting 2 menu and press the or button.

The password entry screen is displayed.

- Enter the password using numeric keys of the remote control.
- Select [Password setting] next, and press the

 or

 or

 button.
- Select [OFF].
- Select [OK] and press the button.

Using the menus

You can call up on-screen menus, and conduct a number of adjustments and settings using the **MENU** button **p.64** on the control panel (main unit side) and remote control.

■ Setup using the Setting display


The menu shown below is for operation instructions purposes and might differ from the actual display.

1. Press the MENU button Display the Setting display menu.

2. Select a Category





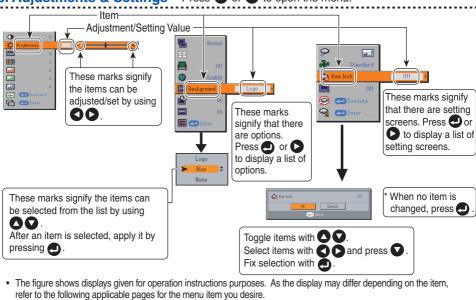

4. End Press the MENU button once more.

· To return to previous item, press the RETURN button.

(The menu will disappear automatically after 30 seconds, if no operation is conducted.)

■ The image adjustment menu

Use this menu to set or adjust image-related items. Items that can be set or adjusted are marked "Yes", and those that cannot are marked "No". (When an item is masked, it indicates that you cannot select for the current input.)

l l	tem 🔷 🔽	Description	Computer	Y/P _B /P _R	Video	S-video
0	Contrast	Adjust the image contrast. Lower Higher	Yes	Yes	Yes	Yes
Ø	Brightness	Adjust the brightness of the image. Darker Description Brighter	Yes	Yes	Yes	Yes
800 000 800 000 800 000	Color	Adjust the color of the image. Lighter Deeper	No Yes \		Yes	Yes
***	Sharpness	Adjust the sharpness of the image. Softer Sharper	Yes	Yes	Yes	Yes
*	Noise reduction ^{*1}	Set the function to reduce screen noise. On (Enable) Off (Disable)	No	Yes	Yes	Yes
	Picture mode	Press ②. Toggle the picture mode with ③ ②. 1/2/3	Yes	Yes	Yes	Yes
500 500 500 500 500 500	R-level	Adjust red of the image color. Less red More red	Yes	Yes	Yes	Yes
2H2 2H2 300 300 300 BBS BBS BBS	G-level	Adjust green of the image color. Less green More green	Yes	Yes	Yes	Yes
345 345 365 366 366	B-level	Adjust blue of the image color. Less blue More blue	Yes	Yes	Yes	Yes
	NTSC mode ^{*2}	Set the black level with ① ①. US : NTSC (US) mode JAPAN: NTSC (JAPAN) mode	No	No	Yes	Yes
ачто - -	Auto setting	Automatically adjusts items such as the sampling phase depending on the type of input signal.	Yes	No	No	No
	Position	Press then change mode using and adjust with	Yes	No	No	No
		Phase Adjust to eliminate flicker.	Yes	No	No	No
		Frequency Adjust to eliminate periodic patterns and flickering when many fine vertical lines appear on the screen.	Yes	No	No	No
		H-position Adjust the horizontal position of the image.	Yes	No	No	No

Using the menus (Continued)

Item 🔷 🔾	Description	Computer	Y/P _B /P _R	Video	S-video
Position	V-position Adjust the vertical position of the image.	Yes	No	No	No
	Clamp 1 Adjusts the clamp pulse position.	Yes	No	No	No
	Clamp 2 Adjusts the clamp pulse width.	Yes	No	No	No

^{*1: [}Noise reduction] may not work depending on signal type.

^{*2: [}NTSC mode] can be displayed and adjusted only when the video signal is set to [NTSC] or [NTSC4.43]. NTSC mode is set to JAPAN when the language is set to Japanese. It is set to US for other languages.

■ The display setting menu

Use this menu to set screen display-related items.

(The items in gray color cannot be set with the current input selection.)

l	tem 🖸 🕡	Description		
	Screen size	Screen size setting [♠ or ♠: Enter setting] → [♠ ♠:Selection] → [Enter: ♠] X3131/X3241 : Normal/Full/Thru/Wide WX3131 : Normal/Full/Thru/4:3 zoom		
	Up/down shift	Lets the projected images shift vertically when the screen size setting is selected Wide for X3131/X3241 (within the range of 1024 x 768) and 4:3 zoom for WX3131 (within the range of 1280 ×800). Lower the image Raise the image		
	Blackboard mode	When projecting on a non-screen surface, select a color in accordance with the projecting surface. Press and switch with and . Off/Green/Black/Brown/Blue/Beige		
	Language	Select one of the languages below to use for displaying the menu and messages [e] or : Enter setting] → [
DFF	Background	Screen to display when there is no input signal [② or ②: Enter setting] → [③ ③: Selection] → [Enter: ②] Logo/Blue/None		
	Icon	Display icons as function guides On O Off		
START	Start-up screen	Display start-up screen when power is turned on On Off		
LOGO	User logo	Display a logo customized by the user for the start-up screen or when there is no input signal. [② or ③: Enter setting] → [③ ⑤: Selection]		
		■ Logo registration Press to display the registration menu.		
		■ Display style ■ ● ■		
		Background Black Blue White		
		Logo confirmation Press .		
		Reset logo Yes 🔾 🕽 No		

Using the menus (Continued)

Detailed description

[Screen size]

• Normal : Enlarge an input image to fit the screen without changing the aspect

ratio of video signals.

• Full : Displays an input image in 1024 × 768 dot resolution by enlarging it to

fill the entire screen. (X3131/X3241)

Displays an input image in 1280 x 800 dot resolution by enlarging it to

fill the entire screen. (WX3131)

 $\bullet \ \ \, \text{Thru} \qquad \quad \text{:} \ \, \text{Displays an input image in the native resolution of the video signals. Thru}$

display is not available for Y/PB/PR, Video and S-Video-input images. The larger image than the screen size will be displayed over the screen. The input image may appear vertically long with some

frequencies of video signals.

• Wide : Displays an input image in the center of the screen with a 16:9 aspect (X3131/X3241) ratio by enlarging it to fit the width of the screen. The upper and lower

ratio by enlarging it to fit the width of the screen. The upper and lower portions of the image will be compressed.

Wide display is not available for Computer-input images.

• **4:3 zoom**: Displays an input image with a 4:3 aspect ratio by enlarging it **(WX3131)** vertically. The enlarged image will be displayed over the screen.

4:3 zoom display is not available for computer images.

 For Y/PB/PR input, screen size setting function is not available for the video signals with a 16:9 aspect ratio.

Note

If you use the screen size setting function on commercial video software, broadcast
or cable-broadcasting programs to display images with the varying aspect ratio
except for the purpose of your private viewing and listening, it may infringe the
copyright protected by the copyright laws.

[Up/down shift]

Shifts the projected image vertically when [**Screen size**] is [**Wide**] for X3131/X3241. Shifts the projected image vertically when [**Screen size**] is [**4:3 zoom**] for WX3131.

[Blackboard mode]

Projects the image in colors more like projecting on a screen.

Precaution

• The projected image may differ depending on the type, color, and material of the blackboard and wall even if the selected color is the same as the projected screens.

[Background]

- RICOH is set for [Logo] by factory setting.
- If user's logo has been registered, it is displayed when [**Logo**] is set for background.

[Start-up screen]

If user's logo has been registered and this setting is [On], the logo is displayed at start-up.

[User logo]

Registers a part of the image that is input from computer, as a stationary picture and displays it as a logo at start-up and when no signal is input.

<Logo registration>

- How to register user logo
 - Project a picture to register.
 - Select [User logo] in the Display setting menu, and press the or button.

 - The registration area is displayed for confirmation. Select [OK] and press the
 button.
 - If the registered picture does not fall within the display area, operate the computer to scroll the screen.
 - Select [Yes] to register and press the Dutton.
 - **6** Registration starts.
 - A message is displayed while registration is in process.

Notes

- You can register a logo when the input is set to Computer.
- The area that can be registered is 512 x 384 dots for X3131/X3241 and 640 x 400 dots for WX3131, at the center of the screen. To register a company logo, prepare the image within the limit.
- Only one logo can be registered. When a new image is registered, the old one is erased.
- The time needed to register or display the image varies depending on the data size.
- If you use this function on commercial video software, broadcast or cablebroadcasting except for the purpose of your private viewing and listening, it may infringe the copyright protected by the copyright laws.

<Display style>

Select the size of the registered logo.

- : Displays the registered image in original size at center of the screen.
- Displays the registered image by enlarging fully in the screen.

 (As processed digitally, the image quality is degraded.)

<Background>

Sets background color when [Center] is selected for the logo $[Display\ style]$.

<Logo confirmation>

You can preview the registered logo.

<Reset logo>

You can reset the registered logo, display style and background to the factory setting. (The logo set for the start-up screen and background is reset.)

Using the menus (Continued)

■ The Default setting menu

This menu shows placement status and other settings.

Default setting 1 menu

	Item 🔷 🔽	Description			
AUTO	Auto keystone	Always correct keystone distortion automatically.	On Off		
	No signal power off	Set the time to wait for the power to be turned off after the last operation is made with no input signal. Off (not turned off) 30 min.			
\$	Auto input search	Set whether the input with signals is only selected or not.	On Off		
8	Веер	Beep when operation is made.	On 🔾 🕽 Off		
0	Power on	Sets whether to turn on the power when the ON/STANDBY button is pressed (Manual), or when the power cord is plugged in (Auto). Manual Auto			
Ġ.	Lamp power	Set the lamp power.	Standard		

Detailed description

[Auto input search]

[On]: Automatically searches the signals that can be projected, and switches input from the connected device that outputs the video signals each time the INPUT button is pressed. The input from the connected device that outputs no video signals is skipped.

[Off]: Displays the Input select menu.

Toggle with **O** buttons and press **O** button. (The input without signals can be also selected.)

Input select menu

Inp	Input select				
	Computer 1				
0	Y/P _B /P _R 1				
	Computer 2				
0	Y/P _B /P _R 2				
	Video				
0	S-video				

•/O shows whether signal is input or not.

■ Note

In normal operation, set [Auto input search] to [On].
 Set to [Off] when you want to select the input source from Input select menu, or if the image does not appear properly.

[Power on]

If [Power on] is set to [Auto] and there is a power outage, the projector will come on once power is restored.

[Lamp power]

When [Lamp power] is set to [Low], the screen becomes a little darker, but the cooling fan noise gets quieter.

Default setting 2 menu

	Item 🔷 🖸	Description
Projection Sets projection r		Sets projection mode in accordance with Placement Style. p.68
	mode	(Standard) (Standard) (Rear) (Rear) (Ceiling) (Ceiling)
	Fan mode	Sets the cooling fan speed. Standard High
4	Key lock	Lock the control panel buttons. [♣ or ♠: Enter setting] → [♠ ♠: Select On/Off] → [♠: Confirm] → [♠ ♠: Select OK to end] Press [Cancel] to return.
	Closed Caption	Closed Caption settings. Press and switch with and . Off/ CC1/ CC2/CC3/CC4/T1/T2/T3/T4
Ø	Reset all	Press . (The password and user logo are not reset.) Resets all adjustments and settings to their factory settings. Yes No
	Password	Password setting p.80 Press

Detailed description

[Fan mode]

Setting [**Fan mode**] to [**High**] increases the cooling fan speed. (The cooling fan noise gets louder.) Set this option to use the projector, for example, at high altitude (over 1,500 meters above sea level).

• Do not set Fan mode to [High] when using the projector at a lower altitude.

[Key lock]

Protect from operating errors by locking on the control panel buttons of the projector. (The remote control operations are available.)

Control panel operations are locked after the setting is done, and accordingly operation with the control panel buttons is disabled.

To release the key lock, set the [Key lock] to [Off] using remote control. Pressing
the [RETURN/MUTE] button on the projector for 10 seconds also sets the [Key
lock] to [Off]. (When operating the main unit, the 2 indicators of LAMP and TEMP
light orange for 3 seconds, and at the same time the projector beeps.).

[Closed Caption]

- Off : Closed Caption is not displayed.
- CC1-CC4: Displays the dialogue and narration of TV programs and videos that are (Caption) closed captioned.
- T1-T4 : Displays information not related to the current program, such as weather, (Text) stock data or the like, when it is provided by individual station.

Note

- Closed Caption is available for Video and S-Video input images.
- This projector supports a special feature called closed captioning which allows subtitles to be displayed at the bottom of the picture. This is pursuant to the Regulations set forth by the US Federal Communications Commission (FCC). Due to the different broadcasting or signaling system, it may not operate correctly in other regions or countries where TV programs do not support closed captioning.
- Closed Caption may not appear correctly depending on the signal conditions or the recording conditions of videotapes.
- If text is not available, only a black rectangle background may appear on screen.
 To prevent this from appearing, set the Closed Caption to [Off].

Using the menus (Continued)

■ Displaying Information (Status display)

This displays information about the input signal, lamp use time, etc.

"Yes": displayed, "No": not displayed

Item	Description	Computer	Y/PB/PR	Video	S-video
Input	Input source name	Yes	Yes	Yes	Yes
Mode name	RGB input mode [Note 1]	Yes	No	No	No
Resolution	Resolution (in dots)	Yes	No	No	No
Frequency	Sync frequency	Yes	No	No	No
Sync	Sync signal polarity [Note 2]	Yes	No	No	No
Signal format	Y/PB/PR signal format	No	Yes	No	No
Video mode	Color method of video signal	No	No	Yes	Yes
Lamp time	Time of lamp use [Note 3]	Yes	Yes	Yes	Yes
Lamp reset count	The count for lamp replacement	Yes	Yes	Yes	Yes
Total time	The total time that this projector is used.	Yes	Yes	Yes	Yes
Version	Firmware version [Note 4]	Yes	Yes	Yes	Yes

Notes

- 1: The mode of supported RGB signals [9.10] is shown.
- 2: Sync signal polarity shown as P (positive) or N (negative) for [H/V].
- 3: Displays [Lamp time] as a measure of when the lamp should be replaced. (Cannot be used as a counter of guaranteed lamp time.)
- 4: **[Version**] shows the version of the projector's internal control program. This version will be requested for customer service purposes.

■ Note

 The displayed information will not be refreshed if the status changes. To refresh the information, dismiss the display, then display it again.

Lamp replacement

A lamp is consumable supplies. If used for extended periods, images will appear dark, and the lamp could burn out. This is characteristic of a lamp, and is not malfunction. (The lifetime of the lamp depends on condition of use.) If this happens, replace it with a new one.

. WARNING

- If the projector is mounted on the ceiling, it is recommended to use your sales representative when the lamp has to be exchanged.
 - Uncovering the lamp while the projector is mounted on a ceiling may lead to a danger of damage from falling pieces of glass if the lamp is broken. Besides, working at high elevations can also be hazardous. Do not attempt to replace the lamp by yourself.
- When replacing, always use lamp "IPSiO PJ Replacement Lamp Type1" (sold separately).
 - If the lamp other than the specified one is used, it may cause a malfunction or damage to the unit due to the difference in the connector shape or the lamp rate.


⚠ CAUTION

- If you have been using the projector, the lamp will be very hot, and may cause burn injuries.
 - Wait for the lamp to cool (for longer than 1 hour) before replacing it.
- If the lamp should break, please handle with care to avoid injury due to broken pieces and contact your sales representative for repair service.
- **1** Unplug power cord.
- Wait until lamp is sufficiently cooled.

Wait for at least 1 hour.


3 Remove the outer lamp cover.

To remove the outer lamp cover, loosen the screw on the side of the projector, and then slide the cover out and up (as shown in the illustration).

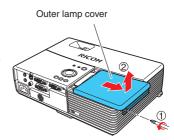


Remove the inner lamp cover.

To remove the inner lamp cover, fully remove both screws, and then lift the cover (as shown in the illustration). Be careful not to loose the screws.

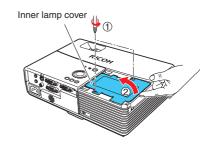


Pull out the lamp.

Loosen the 3 lamp locking screws, pull up the handle, and press the tab to remove the lamp.

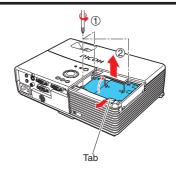


6 Mount the new lamp.

Align the orientation, press down the new lamp until the bottom is reached, and lock in place using the 3 lamp locking screws.

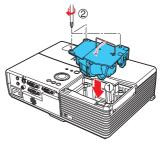

Replace the inner lamp cover.

Reattach both screws removed in step 4. Tighten the screws until the inner lamp cover is fully immobile.

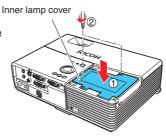


8 Replace the outer lamp cover.

Reseat the outer lamp cover by sliding it in the direction of the arrows (as shown in the illustration), and then tighten the screw loosened in step ③. Tighten the screw until the outer lamp cover is fully immobile. (The outer lamp cover must be attached.)



See the lamp's manual for instructions on resetting the lamp time.

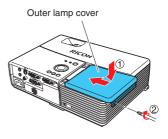

Lamp replacement (Continued)

■ Notes and Precautions

- The [Lamp time] item in the Status display menu indicates the time of lamp use (as a rough guide) p.90
- Please replace the lamp after 2000 hours of use with [Lamp power] in the Default setting 1 menu set to [Standard], and 3000 hours of use with [Lamp power] in the Default setting 1 menu set to [Low].
- There are cases that the lamp can not work before the above mentioned period expires or before the replacement message is displayed.
- Attach the outer lamp cover correctly so that it is not loose. If it is not attached correctly, the projector may fail to be powered on or the lamp may fail to come on.
- · Always replace the lamp with a new one.
- The lamp is made out of glass. Do not touch the glass surface with your bare hands, bang it, or scratch it. (Dirt, jolts, scratches and the like could break the lamp.)

About lamp replacement messages

- The lamp replacement message of this projector displays an appropriate period according to the use period for [Standard] / [Low] of the [Lamp power] respectively.
- When the replacement time approaches, the message of "The lamp life is ending. Please change the lamp." is displayed every time the power is turned on. This display disappears when you press the

 button.

Used Lamps

This projector's lamps contain trace amounts of environmentally harmful inorganic mercury. Be careful not to break used lamps, and dispose of them in accordance with local regulations or contact your sales representative.

Air filter cleaning

The air filter prevents dust and debris from getting inside the projector. Never run the projector with the filter removed. It is recommended that the air filter is cleaned regularly.

- The message "Check the air filter for dirt." is displayed every 100 hours. (If the usage time
 exceeds 100 hours, this message is displayed for about 30 seconds when the image is
 displayed for the first time after power is turned on. This display will be dismissed with any
 operation.)
- · Check out the filter and any debris is found, use the following procedure for cleaning.


⚠ WARNING

 Request cleaning and maintenance of a ceiling-mounted unit from your sales representative.

Unplug power cord.


Remove the air filter.

Pull out the air filter by holding the release knob with your fingers as shown in the figure.




Clean the filter.

Carefully remove the dust and dirt from the air filter with a vacuum cleaner or the like.



Replace the air filter.

Insert the air filter firmly until you hear a click.



Notes

- When dirt and dust build up in the air filter, the air circulation inside the projector is affected and the internal temperature will rise, causing the projector to stop working or malfunction.
- Push the air filter fully in. If the projector is used with the air filter only partially inserted, dust and dirt will enter the interior and this could cause the projector to stop working or break down.
- If you wash the air filer with water, make sure to dry it completely before replacing it.
- If the air filter becomes damaged, replace it. Contact your sales representative for a new filter. If you continue to use the projector when its filter is damaged, dust and dirt will enter the interior and this could cause the projector to stop working or break down.

Lens and main unit cleaning

↑ WARNING

 Request cleaning and maintenance of a ceiling-mounted unit from your sales representative. Attempting to clean or replace the lamp in a high location by yourself may cause you to fall, resulting in injury.

■ Lens cleaning

- Clean the lens with a commercially available blower and/or lens cleaner.
- The lens is easily scratched, so do not rub it with hard objects, or strike it.

■ Main unit cleaning


- Unplug the power cord before cleaning the main unit.
- Wipe dirt off the main unit gently with a soft cloth.
- Do not wipe the main unit with a damp cloth. Doing so may allow water to get inside, resulting in an electric shock or unit failure.
- Do not use benzene, thinner and the like as they may deform or discolor the unit or damage the paint surface.
- · Do not use a chemically saturated cloth.





Trouble indications

The indicator illuminates and a beep sound informs you of internal abnormalities.

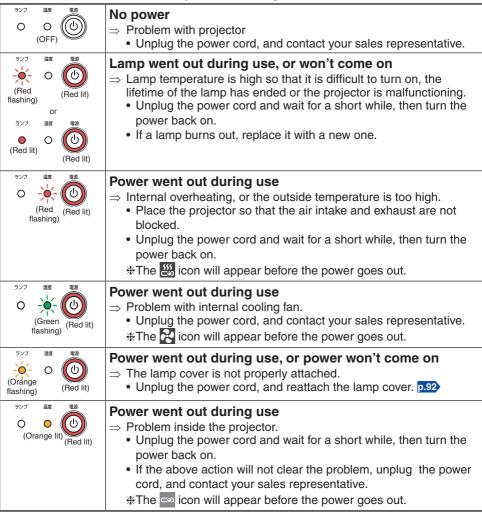

■ Note

 After there is an abnormal indication, the abnormal status remains until the power cord is unplugged.

Troubleshooting

If you think something is wrong, check the followings before contacting customer service. Please see "**Trouble indications**" p.97 as well.

If This Happens	Check
No power	 Is the power cord plugged in? Is it connected to the projector? Is the outer lamp cover attached properly? p.92
Power goes out during use	 Is the ambient temperature high? p.97 Is the air intake or air exhaust blocked? p.97
No picture	 Is the input source selected correctly? (When [Auto input search] is [Off]) p.88 Is the mute function on? p.79 Is the brightness setting minimized? p.83 Are the connections set up correctly? p.71 Are all the connected devices functioning properly?
No audio	 Did you press the input button? p.74 Is the mute function on? p.79 Is the volume setting minimized? p.75 Are the connections set up correctly? p.71 Are all the connected devices functioning properly?
Picture not displayed correctly	 Is the input signal supported by the projector? p.101 p.103 Is there something generating an abnormal video signal, for instance the video tape?
Picture blurred Part of picture out of focus	 Is the lens dirty? p.96 Is the lens focus adjusted optimally? p.75 Is the projection distance within the projector's supported range? p.69 Is the projector's screen placement angle tilted too far? p.75 Are the sharpness or sampling phase adjustments off? p.83
Image is dark	 Are the brightness or contrast adjustments off? p.83 Is the lamp nearing the end of its service life? p.90
Colors too light Bad shading	 Are the color, R-level, G-level, or B-level adjustments off? p.83 Is the screen dirty? Is the blackboard mode set properly? p.85 Is the lamp nearing the end of its service life? p.90
Control panel key doesn't work	Is the key lock function on? p.89

If This Happens	Check	
Remote control doesn't work	 Are the remote control's batteries drained? Are the batteries inserted into the remote control correctly? Is the remote control being used within the effective range? Are there any obstructions between the remote control and projector? Are there any fluorescent or other bright lights shining at the projector's infrared remote sensor? 	

Specifications

■ List of general specifications

	Item	Specification
Consum	nption Power	270 W
10/a:		X3131/WX3131: 1.8 kg
Weight		X3241: 1.9 kg
Externa	l Dimensions	X3131/WX3131: 272 × 82 × 189 mm (W × H × D)
(includir	ng protruding parts)	X3241: 295 × 82 × 196 mm (W × H × D)
Cabinet	material	PC+ABS resin and PC resin (Some parts including Mg alloy)
Condition	s for usage environment	Temp: 5°C to 35°C; relative humidity: 30% to 70%
	Display method	3-panel transmission
		X3131: 0.63 type
	Panel size	WX3131: 0.59 type
LCD Pa	nel	X3241: 0.70 type
	Drive system	TFT active matrix
	Picture elements	X3131/X3241: 786,432 pixels (1024 H × 768 V)
	Picture elements	WX3131: 1,024,000 pixels (1280 H × 800 V)
Long	·	X3131/WX3131: F=1.7 ~ 1.87 f=19.2 ~ 23.00 mm
Lens		X3241: F=1.6 ~ 1.76 f=21.5 ~ 25.80 mm
Lamp		High-pressure mercury lamp (180 W)
Projection	on screen size	30-300 inches
		X3131: 0.89 m ~ 10.93 m
Projection	on distance	WX3131: 0.94 m ~ 11.58 m
		X3241: 0.89 m ~ 10.94 m
Speake		1 W (Mono)
COM	IPUTER 1 IN terminal	Mini D sub 15 pin RGB / Y/P _B /P _R (dual use)
	IPUTER 2 IN terminal	Mini D sub 15 pin RGB / Y/Pв/Pr/MONITOR OUT
[Ē]		(multiple use)
ļ ⊉ S-VII	DEO terminal	Mini DIN 4 pin
E VIDE	O terminal	RCA Pin Jack, 1 V (p-p), 75 Ω
	IO IN terminal	3.5 mm dia. stereo mini-jack: 1.5 V (rms), 22 k Ω or more
<u> </u>		COMPUTER 1 IN, 2 IN/VIDEO/S-VIDEO (multiple use)
Ŭ ├──	IO OUT terminal	3.5 mm dia. stereo mini-jack
CON	TROL terminal	D sub 9 pin (RS-232C)

■ Notes

- This model complies with the above specifications.
- Designs and specifications are subject to change without notice.
- This model may not be compatible with features and/or specifications that may be added in the future.

■ Separately sold product

IPSiO PJ Replacement Lamp Type1 IPSiO PJ Replacement Air filter Type1

■ List of supported signals (RGB signals)

This projector supports the following RGB signals. Note, however, that depending on the computer model, the screen may show flicker or streaking. Please adjust the projector if this happens.

Resolution	Mode	Refresh rate (Hz)	H-frequency (kHz)	Clock (MHz)
720 x 400	720x400_85	85.039	37.927	35.500
640 x 480	VGA_60	59.940	31.469	25.175
	VGA_72	72.809	37.861	31.500
	VGA_75	75.000	37.500	31.500
	VGA_85	85.008	43.269	36.000
800 x 600	SVGA_56	56.250	35.156	36.000
	SVGA_60	60.317	37.879	40.000
	SVGA_72	72.188	48.077	50.000
	SVGA_75	75.000	46.875	49.500
	SVGA_85	85.061	53.674	56.250
832 x 624	MAC16"	74.550	49.725	57.283
1024 x 768	XGA_60	60.004	48.363	65.000
	XGA_70	70.069	56.476	75.000
	XGA_75	75.029	60.023	78.750
	XGA_85	84.997	68.667	94.500
	MAC19"	74.700	60.134	79.857
1152 x 864	SXGA1_75	75.000	67.500	108.000
*1280 x 800	WXGA_60	59.880	49.580	83.300
1280 x 960	QuadVGA_60	60.000	60.000	108.000
	QuadVGA_85	85.002	85.938	148.500
1280 x 1024	SXGA3_60	60.020	63.981	108.000
	SXGA3_75	75.025	79.976	135.000
	SXGA3_85	85.024	91.146	157.500
1400 x 1050	SXGA+	59.978	65.317	121.750
1600 x 1200	UXGA_60	60.000	75.000	162.000
	UXGA_65	65.000	81.250	175.500
	UXGA_70	70.000	87.500	189.000
	UXGA_75	75.000	93.750	202.500
	UXGA_85	85.000	106.250	229.500

^{*: 1280} x 800 is available only for WX3131

Note

Signals whose resolution exceeds the native resolution mentioned below will be compressed.
 For this reason, some information may be lost, or image quality may be affected.

 $X3131/X3241 : 1024 \times 768$ resolution WX3131 $: 1280 \times 800$ resolution

Specifications (Continued)


■ List of supported signals (Component signals)

Signal format	fh(kHz)	fv(Hz)
480i(525i)@60Hz	15.73	59.94
480p(525p)@60Hz	31.47	59.94
576i(625i)@50Hz	15.63	50.00
576p(625p)@50Hz	31.25	50.00
720p(750p)@60Hz	45.00	60.00
720p(750p)@50Hz	37.50	50.00
1080i(1125i)@60Hz	33.75	60.00
1080i(1125i)@50Hz	28.13	50.00
1080p(1125p)@60Hz	67.50	60.00
1080p(1125p)@50Hz	56.25	50.00

■ List of supported signals (Video, S-Video signals)

Video mode	fh(kHz)	fv(Hz)	fsc(MHz)
NTSC	15.73	60	3.58
PAL	15.63	50	4.43
SECAM	15.63	50	4.25 or 4.41
PAL-M	15.73	60	3.58
PAL-N	15.63	50	3.58
PAL-60	15.73	60	4.43
NTSC4.43	15.73	60	4.43

■ Pin assignment of COMPUTER 1 IN, COMPUTER 2 IN & MONITOR terminals



Mini D sub 15 Pin connector

Input Signal

RGB input

RGB signals: 0.7 V (p-p) 75 Ω Horizontal sync signal: TTL level (Pos/neg polarity) Vertical sync signal: TTL level (Pos/neg polarity)

• Y/P_B/P_R input


Y signal: 1.0 V (p-p) 75 Ω PB/PR signals: 0.7 V (p-p) 75 Ω

Pin No.	Pin description			
FIII NO.	During RGB input	During Y/PB/PR input		
1	Video signal (R)	Color difference signal (PR)		
2	Video signal (G)	Luminance signal (Y)		
3	Video signal (B)	Color difference signal (PB)		
4	GND	*		
5	GND	*		
6	GND(R)	GND(PR)		
7	GND(G)	GND(Y)		
8	GND(B)	GND(P _B)		
9	N.C	*		
10	GND	*		
11	GND	*		
12	N.C	*		
13	Horizontal sync signal	*		
14	Vertical sync signal	*		
15	N.C	*		
+ Do not connect anything				

^{*} Do not connect anything.

■ CONTROL terminal

Pin assignment



D sub 9 pin connector

Pin No.	Signal Name	Description
1	DCD	Data carrier detect
2	TXD	Sending data
3	RXD	Receiving data
4	DTR	Data terminal ready
5	GND	Signal ground
6	DSR	Data set ready
7	RTS	Request to send
8	CTS	Consent to send
9	RI	Ring indicator

Interface format

1. Communication method

RS-232C, 9600 bps, No Parity, Data Length: 8 bits;

Stop Bit Length: 1 bit

2. Communication format

STX (02 h) Command (3 Byte) ETX (03 h)

Only 1 command valid per communication. For input commands, only ASCII-compliant all-

3. Data format

4. Replies

uppercase alphanumeric characters supported.

ACK (06 h) | CR(0 Dh) | Data ACK (06 h) | ESC(1 Bh) | ... Normally ended

No acknowledge

Acknowledge

NAK (15 h)

... Aborted

If commands are to be sent consecutively, wait for the response from the projector before sending the next command.

Main Commands

Item	Command
Power on	PON
Power off	POF
Icon display on	MO0
Icon display off	MO1
Auto setting (RGB input)	PAT
Status display on	DON
Status display off	DOF